

# Start UP

- **ALWAYS** switch on Base (Black/Red ring) **FIRST** & **WAIT** 20 seconds until LED flashes slowly.
- Switch on Portables (Green ring). **WAIT** until LED flashes slowly. Unit starts in Listen Only mode.
- Double press PTT1 on all units to access Conference mode.
- 'M' button scrolls between Personal Settings. Use + / - button to adjust:
- ▶ VOX: Set to lowest level and then increase to suit ambient noise level.
- ▶ Microphone: **ALWAYS** set to Dynamic.
- ▶ Volume: Set at lowest and adjust to personal preference.

## A user's guide to DECT II communications



# Trouble Shooting

- If Portable is continually searching ("searching" heard in head set) it requires pairing. Consult Super User.



- If you hear the conference but they cannot hear you:
- ▶ Ensure headset plug is fully inserted.
- ▶ Press PTT1 button twice to enter Conference.
- ▶ Check microphone is set to dynamic.
- ▶ Check VOX level.



## We won't let an RRV lead to an RIP

There's nothing 'kids play' about an RRV. Remember, if you can't see the driver, he can't see you. Keep a clear line of sight between you, the machine controller and the driver.

Visit:  
[www.safety.networkrail.co.uk/RRVsafety](http://www.safety.networkrail.co.uk/RRVsafety)

- When out of range you will hear "signal low, out of range, out of range" then after 20 seconds "searching". To reconnect move nearer to the base unit. Unit should reconnect in Listen Only mode. Double press PTT1 to re-enter conference.
- If unit fails to power up (no flashing green LED), obtain replacement unit.



There's nothing 'kids play' about an RRV. Remember, if you can't see the driver, he can't see you. Keep a clear line of sight between you, the machine controller and the driver.

Visit: [www.safety.networkrail.co.uk/RRVsafety](http://www.safety.networkrail.co.uk/RRVsafety)

**We won't let an RRV lead to an RIP**



My daddy was workin and he didnt look out  
for the RRV monsta and it sneaked up and  
pushed him over and he hasnt been  
able to work since