

TomTom Bridge User Manual

Contents

Contents

- Welcome to the TomTom4
- Bridge4
 - Using gestures.....5
- TomTom Navigation App6
 - Welcome to navigation with TomTom7
 - GPS reception8
 - What's on the TomTom Navigation app screen.....9
 - Traffic 18
 - Setting your vehicle type 24
 - About My Vehicle 24
 - Setting your vehicle type 24
 - Planning a route for a Bus or Truck 25
 - Viewing route restrictions 25
 - Using Quick Search..... 27
 - About search 27
 - Planning a route to a POI using search 27
 - Planning a route to a POI using online search..... 29
 - Entering search terms 31
 - Working with search results 32
 - About postcodes 33
 - About mapcodes 34
 - List of POI type icons 34
 - Planning a route 38
 - Planning a route to an address using search 38
 - Planning a route to a city centre 39
 - Planning a route to a POI using search 41
 - Planning a route to a POI using online search..... 43
 - Planning a route using the Internet browser 45
 - Planning a route using the map..... 47
 - Planning a route using My Places 49
 - Planning a route using coordinates 50
 - Planning a route using a mapcode 51
 - Finding an alternative route 52
 - Planning a route in advance 52
 - Finding a car park 54
 - Finding a petrol station 56
 - Changing your route 59
 - The Current Route menu..... 59
 - Avoiding a blocked road..... 61
 - Avoiding part of a route..... 61
 - Types of route 62
 - Route features 62
 - Avoiding a route feature on your route 63
 - Adding a stop to your route from the current route menu 63
 - Adding a stop to your route using the map 63
 - Deleting a stop from your route 63
 - Skipping the next stop on your route 64
 - Reordering stops on a route 64
 - My Routes 65
 - About My Routes..... 65
 - About GPX and ITN files..... 65
 - Saving a route 66
 - Navigating using a saved route..... 67
 - Navigating to a stop on a saved route 67

Adding a stop to a saved route using the map	69
Deleting a route or a track from My Routes	70
Recording a track.....	70
Exporting tracks from the TomTom Navigation app	70
Importing routes and tracks	70
Speed Cameras.....	72
Danger Zones.....	76
My Places	79
Settings.....	84
Arrival information.....	86
Route Information	86
Getting Help.....	92
Addendum and Copyright	93
Addendum	94
Copyright notices.....	99

Welcome to the TomTom Bridge

This Reference Guide explains how to use the TomTom Bridge and the installed TomTom apps. The Reference Guide has the following sections:

- [The TomTom Bridge](#)
- [The TomTom Navigation app](#)

Important: For other settings and operation instructions for the TomTom Bridge, and for instructions about other apps installed on the TomTom Bridge, please refer to the applicable User Documentation.

Using gestures

You use gestures to control your device.


This Reference Guide explains which gestures to use throughout the guide but here is a complete list of all the gestures you can use.

Double tap




Touch one finger on the screen twice in rapid succession.
Example of when to use this: Zooming in.

Drag

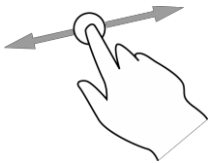

Put one finger on the screen and move it across the screen.
Example of when to use this: Scrolling a screen.

Flick

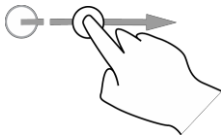

Flick the tip of a single finger across the screen.
Example of when to use this: Scrolling a big distance on the screen.

Press and hold



Put one finger on the screen for more than 0.5 second.
Example of when to use this: Selecting a location on the map.

Pinch to zoom



Touch the screen with your thumb and a finger. Move them apart to zoom in or move them together to zoom out.
Example of when to use this: Zooming in and out on the screen.

Tap or select



Tap a single finger on the screen.
Example of when to use this: Selecting an item in a menu, or opening an item.

TomTom Navigation App

Welcome to navigation with TomTom

This Section explains how you use the TomTom Navigation app.

Important: For other settings and operation instructions for the TomTom Bridge, and for instructions about other apps installed on the TomTom Bridge, please refer to the applicable User Documentation.

The navigation app is installed on the device, either as an app that you have to open, or as a software widget on the Home screen. The widget has some limited functionality, for example you can see your route and route instructions on the widget, but you can't plan a route.

Select the widget to open the full navigation app to use all the navigation features.

For information about what you see in the navigation app, go to:

- [What's on the screen](#)
- [Using gestures](#)
- [Main Menu](#)

GPS reception

When you first start the navigation app, it may need a few minutes to find your GPS position and show your current location on the map. Make sure you have GPS activated on your device.

Tip: The GPS settings are in the device's **Settings** app.

In areas where GPS reception is not possible, such as tunnels, your location may not be accurate.

Important: The navigation app cannot give you route instructions until it has received location data.

What's on the TomTom Navigation app screen

The map view

The map view is shown when you have no planned route. Your actual location is shown as soon as your Bridge has found your GPS location.

You can use map view in the same way as you might look at a traditional paper map. You can move around the map using [gestures](#), and zoom using the zoom buttons.


Important: Everything on the map is interactive including the route and the map symbols - try selecting something and see what it does!

Tip: To open a pop-up menu for an item on the map, for example a route or a POI, select the item to open the menu. To select a location on the map, select and hold the location until the pop-up menu opens.

The map shows your current location and many other locations such as your [My Places](#) locations.

If you have not planned a route the map is zoomed out to show the area around your location.

If you have planned a route, your complete route is shown on the map. You can [add stops](#) to your route directly from the map. When you start to drive, the [guidance view](#) is shown.

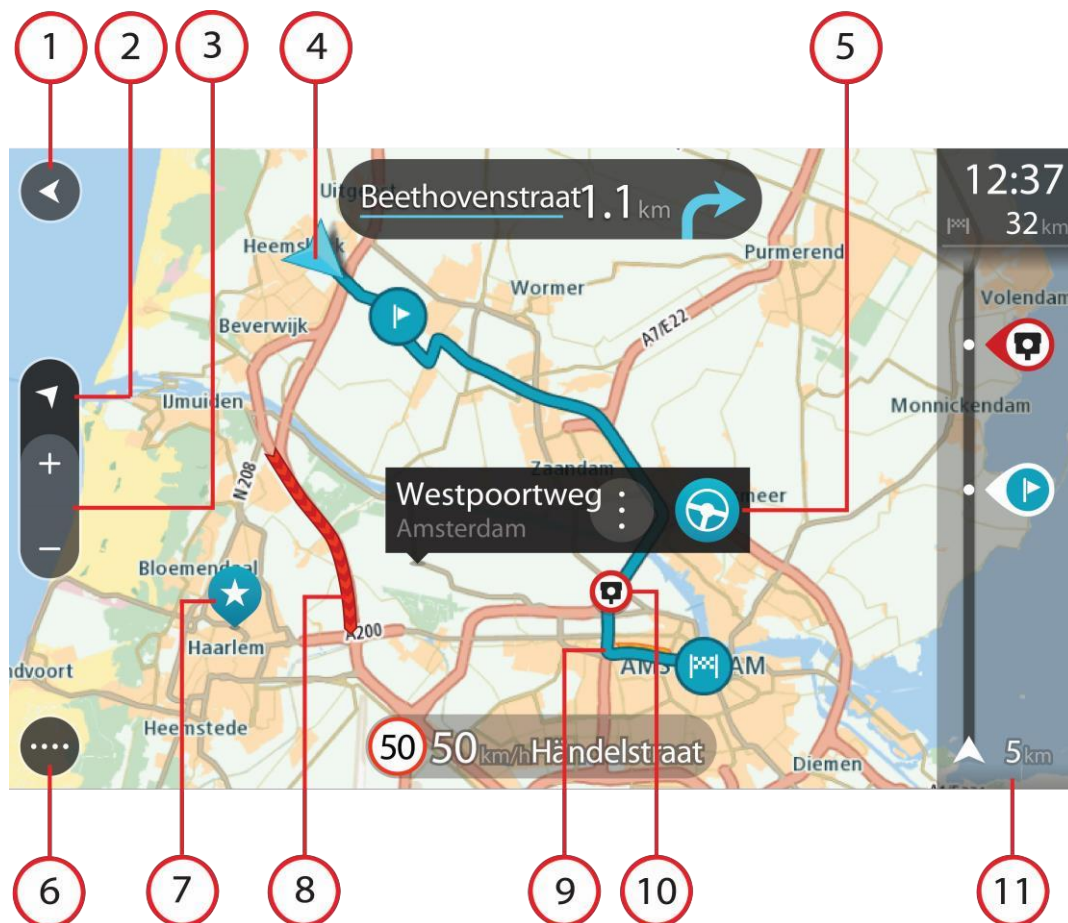

1. Back button. This button returns the map to an overview of your whole route or, if no route is planned, moves the map to put your current location at the centre.
2. Switch view button. Select the switch view button to change between the map view and the guidance view. When in map view, if you are driving, the small arrow rotates to indicate your direction of travel relative to north, with north being up.
3. Zoom buttons. Select the zoom buttons to zoom in and out.
4. Current location. This symbol shows your current location. Select it to add it to My Places or search near your current location.

Note: If your Bridge cannot find your location the symbol appears grey.

5. Selected location. Press and hold to [select a location](#) on the map. Select the pop-up menu button to show options for the location, or select the **Drive/Ride** button to plan a route to the location.
6. Main Menu button. Select the button to open the [Main Menu](#).
7. Map symbols. Symbols are used on the map to show your destination and your saved places:



Your destination.



Your home location. You can set your home location in [My Places](#).



Your work location. You can set your work location in [My Places](#).



A [stop](#) on your route.



A location saved in [My Places](#).



When a search for POIs near destination is done and the results are shown on the map, less important POIs are shown as black pins with white crosses.

Select a map symbol to open the pop-up menu, then select the menu button to see a list of actions you can take.

8. Traffic information. Select the traffic incident to display information about the [traffic delay](#).

Note: Traffic information is only available if your TomTom Bridge has TomTom Traffic.

9. Your route, if you have [planned a route](#). Select the route to clear it, change the route type, add a stop or save changes to your route.
10. Speed cameras on your route. Select a [speed camera](#) to display information about that camera.
11. Route bar. The [route bar](#) is shown when you have planned a route.


The guidance view

The guidance view is used to guide you along the route to your destination. The guidance view is shown when you start driving. You see your current location and details along your route, including 3D buildings in some cities.

The guidance view is normally in 3D. To show a 2D map with the map moving in your direction of travel, change the [2D and 3D default settings](#).

Tip: When you have planned a route and the 3D guidance view is shown, select the switch view button to change to the [map view](#) and use the interactive features.

When the navigation app starts after it was closed and you had a route planned, you are shown the map view with your planned route.

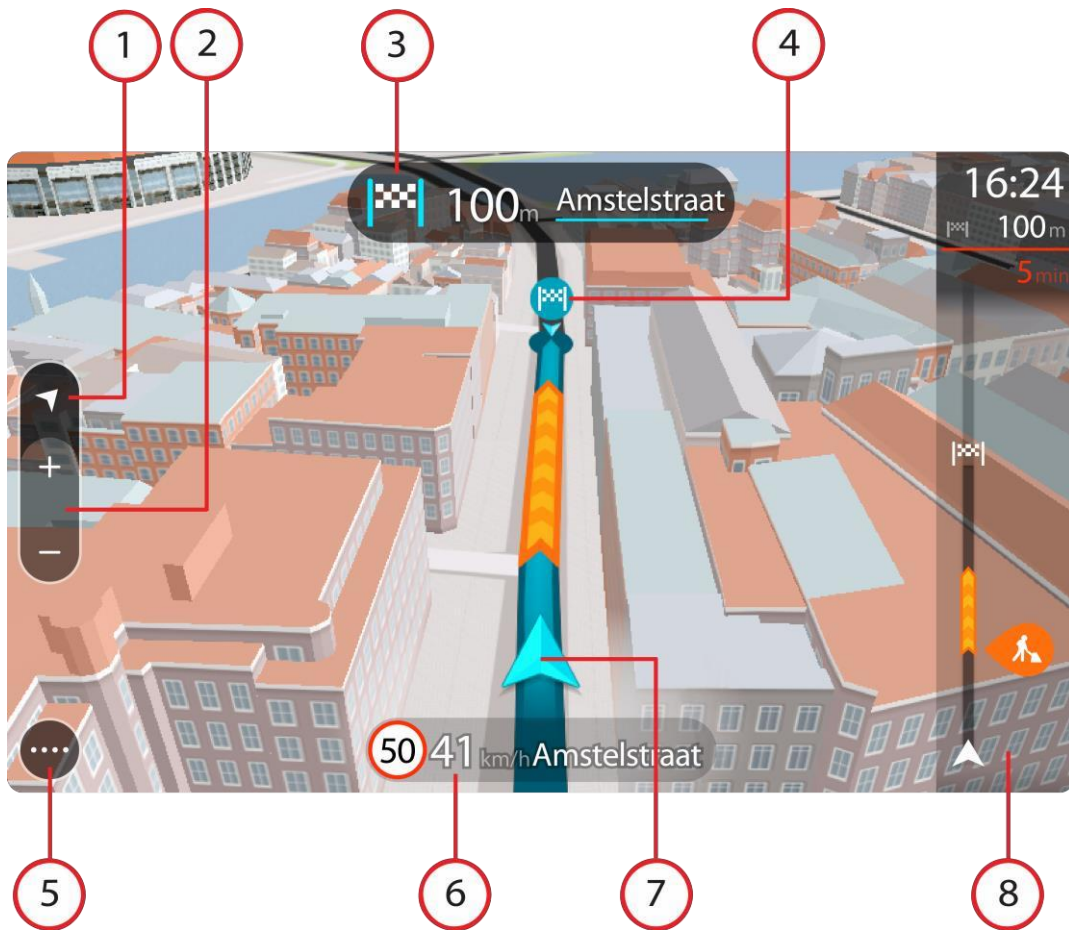

1. Switch view button. Select the switch view button to change between the map view and the guidance view.
2. Zoom buttons. Select the zoom buttons to zoom in and out.

Tip: On most devices you can also pinch to zoom in and out.

3. Instruction panel. This panel shows the following information:
 - The direction of your next turn.
 - The distance to your next turn.
 - The name of the next road on your route.
 - [Lane guidance](#) at some junctions.
4. Route symbols. Symbols are used on your route to show your starting location, your [stops](#), and your destination.
5. Main Menu button. Select the button to show the [Main Menu](#).
6. Speed panel. This panel shows the following information:
 - The speed limit at your location.
 - Your current speed. If you drive more than 5 km/h or 3 mph over the speed limit the speed panel turns red. If you drive less than 5 km/h or 3 mph over the speed limit the speed panel turns orange.
 - The name of the street you are driving on.
7. Current location. This symbol shows your current location.

Note: If your Bridge cannot find your location the symbol appears grey.

8. Route bar. The [route bar](#) is shown when you have planned a route.

Important: To see a wider route bar showing additional route information, change the setting for [Route Information](#).

The route bar

The route bar is shown when you have planned a route. It has an arrival information panel at the top, and a bar with symbols underneath.

Important: To see a wider route bar showing additional route information, change the setting for [Route Information](#).

Note: The [distance ahead shown by the route bar](#) depends on the overall length of your route.



The arrival information panel shows the following information:

- The estimated time that you will arrive at your destination.
- The length of time to drive to the destination from your current location.
- A parking button is shown near the destination flag when parking is available near your destination.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

If you have [stops](#) on your route, select this panel to change between information about the next stop and your final destination.

You can [choose the information you see](#) on the arrival information panel.

Traffic status - if your Bridge isn't receiving any traffic information, a symbol showing traffic with a cross appears underneath the arrival information panel.

The bar uses symbols to show the following information:

- The next two [stops](#) on your route.

Tip: To quickly remove a stop, select it in the route bar and use the menu.

- [Petrol stations](#) that are directly on your route.
- [TomTom Traffic](#) including heavy rain or snow.
- TomTom [Speed Cameras](#) and [Danger Zones](#).
- Rest stops directly on your route.

You can [choose the information you see](#) on your route.

The symbols are in the order that they occur on your route. For traffic incidents, the symbol for each incident alternates between showing the type of incident and the delay in minutes. Select a symbol to see more information about a stop, an incident or a speed camera. If a symbol is shown on top of another symbol, selecting the symbols zooms in on the route bar to show each symbol separately. You can then select a symbol.

The total time delay due to traffic jams, weather, and other incidents on your route, including information provided by IQ Routes, is shown above the symbols.

For a complete list of incident types, see [Traffic incidents](#).

The bottom of the route bar represents your current location and shows

the distance to the next incident on your route. In addition, you can choose to see the [current time](#) if you switch the setting on.

Note: To make the route bar more readable some incidents may not be shown. These incidents will always be of minor importance and only cause short delays.

The route bar also shows status messages, for example **Finding fastest route** or **Playing route preview**.

Distances and the route bar

The distance ahead shown on the route bar depends on the length of your route, or the distance remaining on your route.

- For remaining distances longer than 50 km (31 miles), only the next 50 km (31 miles) is shown. The destination icon is not shown.

Tip: You can scroll the route bar to see your whole route.

- For remaining distances between 10 km (6 miles) and 50 km (31 miles), the complete distance is shown. The destination icon is shown fixed at the top of the route bar.
- For remaining distances of less than 10 km (6 miles) the complete distance is shown. The destination icon moves down towards the chevron symbol as you get nearer to your destination.

The top half of the route bar shows twice the distance of the bottom half, as shown in the following examples:

- A remaining distance of 50 km on the route bar is split into 34 km (21 miles) at the top and 16 km (9 miles) at the bottom.
- A remaining distance of 10 km on the route bar is split into 6.6 km (4 miles) at the top and 3.3 km (2 miles) at the bottom.

The route bar is constantly updated as you drive.

The quick menu

To open the quick menu, select the current location symbol or the speed panel in the guidance view.

You can then do any of the following:

- [Mark a location](#)
- [Report a new speed camera](#)
- [Avoid a blocked road](#)
- See your current location or your latitude/longitude if not on a named road.

Navigation buttons

On the [map view](#) or [guidance view](#), select the Main Menu button to open the Main Menu.

The following navigation buttons are available in the Main Menu:

Search



Select this button to search for an address, a place or a Point of Interest, then [plan a route](#) to that location.

Drive Home

Select this button to drive to your home location. If this button is not included in your main menu, go to [My Places](#) to set up your home location.



Drive to Work

Select this button to drive to your work location. If this button is not included in your main menu, go to [My Places](#) to set up your work location.



Recent Destination

Select this button to open the list of your recent destinations. Select a recent destination to plan a route to that destination.



Current route

Select this button to [clear or change](#) your planned route.



My Places

Select this button to show your [saved places](#).



My Routes

Select this button to show your [saved routes](#).



Voice Control

Select this button to start [voice control](#).



Tip: You can also say the wake-up phrase to start voice control.

Parking

Select this button to [find car parks](#).



Petrol Station

Select this button to [find petrol stations](#).



Report Speed
Camera

Select this button to [report a speed camera](#).



Start Recording

Select this button to start or stop recording a track.



Other buttons

On the map or guidance view, select the Main Menu button to open the Main Menu.

The following buttons are available in the Main Menu screen, in addition to the [navigation buttons](#):



Select this button to open the [Settings Menu](#).



Select this button to open the [Help Menu](#). The Help Menu contains a guided tour and information about the navigation app.



Select this button to reorder the buttons in the Main Menu.



Select this button to return to the previous screen.



Select this button to return to the [map view](#) or [guidance view](#).



This symbol shows that your device is connected to TomTom services.



This symbol shows that your device is not connected to TomTom services.



This button shows that you will hear voice instructions. Select the button to switch off voice instructions. You will no longer hear spoken route instructions but you will still hear information such as traffic information and warning sounds.

Tip: You can select the types of instructions you want to hear. Select [Voices](#) in the Settings Menu and select the instructions you want to hear.



This button shows that you will not hear voice instructions. Select this button to switch on voice instructions.



This button shows that the display is using day colours. Select the button to reduce the brightness of the screen and display the map in darker colours.

When driving at night or when driving through a dark tunnel, it is easier to view the screen and less distracting for the driver if the brightness of the screen is dimmed.



Tip: Your device automatically switches between day and night colours depending on the time of day. To switch off this feature, select [Appearance](#) in the Settings menu and switch off **Switch to night colours when dark**.

This button shows that the display is using night colours. Select the button to increase the brightness of the screen and display the map in brighter colours.

Volume control

On the map or guidance view, select the Main Menu button to open the Main Menu.

Select and slide the volume control to change the volume of voice instructions and warnings. If the voice instructions are switched off, the volume control will still change the volume of the warnings.



Running in the background

The navigation app continues to run when it is in the background, for example when you are using another app on the TomTom Bridge.

If the navigation app is running in the background and you are driving on a planned route, you will continue to hear driving instructions.

Changing the text and button size

You can change the size of the text and the buttons you see on the screen, for example to make the text easier to read and the buttons easier to use.

Note: This feature is only available on devices with a 6 inch / 15 cm or larger screen.

To change the size of the text and the buttons, select the **Settings** button in the Main Menu, then select **Appearance**, then select **Size of text and buttons**. Your device must restart to apply the change.

Traffic

About TomTom Traffic

TomTom Traffic is a unique TomTom service providing real-time traffic information. For more information about TomTom services, go to tomtom.com/services.

In combination with IQ Routes, TomTom Traffic helps you plan the optimum route to your destination taking into account the current local traffic conditions and the weather.

Your navigation app regularly receives information about the changing traffic conditions. If traffic jams, heavy rain, snow or other incidents are found on your current route, your navigation app will offer to replan your route to try and avoid any delays.

The TomTom Bridge uses either a permanent connection or a smartphone connection to [connect to TomTom services](#).

Important: If use your smartphone to connect to TomTom Services and you are outside of the area covered by your mobile data plan, you may be liable for extra roaming charges while using TomTom Services.

Note: TomTom services are not available in all countries or regions, and not all services are available in all countries or regions. For more information on available services in each region, go to tomtom.com/services.

The route bar

The route bar is shown when you have planned a route. It has an arrival information panel at the top, and a bar with symbols underneath.

Important: To see a wider route bar showing additional route information, change the setting for [Route Information](#).

Note: The [distance ahead shown by the route bar](#) depends on the overall length of your route.



The arrival information panel shows the following information:

- The estimated time that you will arrive at your destination.
- The length of time to drive to the destination from your current location.
- A parking button is shown near the destination flag when parking is available near your destination.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

If you have [stops](#) on your route, select this panel to change between information about the next stop and your final destination.

You can [choose the information you see](#) on the arrival information panel.

Traffic status - if your Bridge isn't receiving any traffic information, a symbol showing traffic with a cross appears underneath the arrival information panel.

The bar uses symbols to show the following information:

- The next two [stops](#) on your route.

Tip: To quickly remove a stop, select it in the route bar and use the menu.

- [Petrol stations](#) that are directly on your route.
- [TomTom Traffic](#) including heavy rain or snow.
- TomTom [Speed Cameras](#) and [Danger Zones](#).
- Rest stops directly on your route.

You can [choose the information you see](#) on your route.

The symbols are in the order that they occur on your route. For traffic incidents, the symbol for each incident alternates between showing the type of incident and the delay in minutes. Select a symbol to see more information about a stop, an incident or a speed camera. If a symbol is shown on top of another symbol, selecting the symbols zooms in on the route bar to show each symbol separately. You can then select a symbol.

The total time delay due to traffic jams, weather, and other incidents on your route, including information provided by IQ Routes, is shown above the symbols.

For a complete list of incident types, see [Traffic incidents](#).

The bottom of the route bar represents your current location and shows the distance to the next incident on your route. In addition, you can choose to see the [current time](#) if you switch the setting on.


Note: To make the route bar more readable some incidents may not be shown. These incidents will always be of minor importance and only cause short delays.

The route bar also shows status messages, for example **Finding fastest route** or **Playing route preview**.

Looking at traffic on the map

Traffic incidents are shown on the map. If several traffic incidents overlap the highest priority incident is shown - for example, a road closure is higher priority than road works or a closed lane.

Tip: Select an incident on the map to see more detailed information.

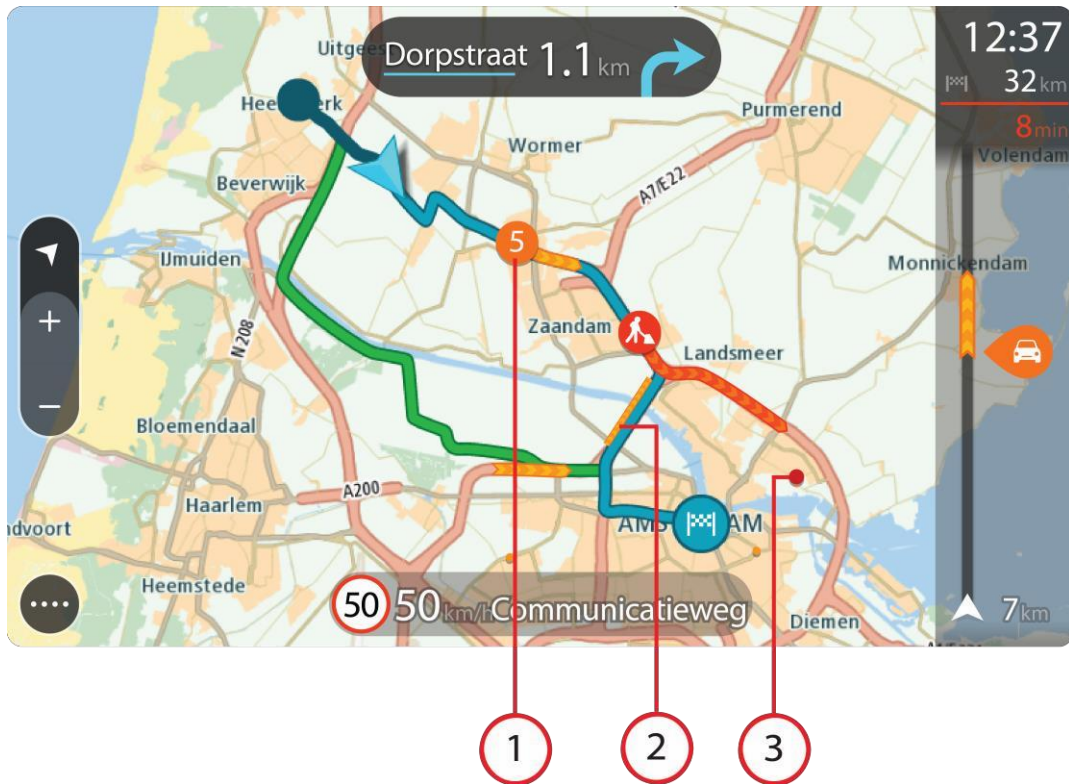

1. Traffic incident that affects your route in your direction of travel.

A symbol or number at the start of the incident shows the type of incident or the delay in minutes, for example 5 minutes.

The colour of the incident indicates the speed of traffic relative to the maximum allowed speed at that location, with red being the slowest. The stripes on the traffic jam are also animated to show the speed of the traffic, where appropriate.

For a complete list of incident types, see [Traffic incidents](#).

Tip: You see weather symbols on the map if there is bad weather such as heavy rain or snow.

2. Traffic incident on your route but in the opposite direction of travel.
3. Traffic incidents on roads that are not visible at your current zoom level.

Looking at traffic on your route


Information about traffic incidents on your route is shown in the route bar on the right-hand side of the map.

The [route bar](#) tells you about traffic delays while you are driving, using symbols to show you where each traffic incident is located on your route.

Note: If your Bridge isn't receiving any traffic information, a symbol showing traffic with a cross appears underneath the arrival information panel.

Note: To make the route bar more readable some incidents may not be shown. These incidents will always be of minor importance and only cause short delays.

To get more information about an incident, select an incident in the route bar. The map opens zoomed in on the incident and an information panel opens showing detailed information about the traffic incident.

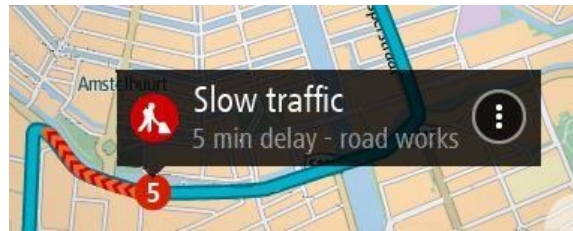

The information shown includes:

- The type of traffic incident - general, accident, road works, lane closure or weather such as heavy rain or snow.
- The severity of the incident - slow traffic, queuing traffic or stationary traffic.
- The delay time.
- The length of the incident.

For a complete list of incident types, see [Traffic incidents](#).

Select the back button to go back to the guidance view.



Traffic incidents

Traffic incidents and weather warnings are shown in the map view and in the route bar.

Traffic incident symbols:

	Stationary traffic
	Queuing traffic
	Slow traffic
	Unknown accident
	Unknown incident
	Roadworks
	Lane closure
	Road closure

Weather symbols:

	Wind
	Rain
	Fog
	Snow
	Ice

Approaching a traffic jam warning

A warning is given as you approach a traffic jam. You are warned in several ways:



- A warning symbol is shown in the [route bar](#).
- The route bar zooms in to the start of the traffic jam.
- Your distance to the start of the traffic jam is shown in the route bar.
- The colour of the road on the route bar changes to orange or red, depending on the severity of the traffic jam.
- The background colour of the route bar background changes to red if you are driving too fast towards the traffic jam.
- You hear a warning sound.

To [change the way you are warned](#), select **Sounds & Warnings** in the [Settings](#) menu.

Avoiding a traffic jam on your route

You can avoid a traffic jam that is on your route.

Note: Sometimes the quickest route is still the route that has the traffic jam.

Note: It may not be possible to find an alternative route around the traffic jam if none exists.

Avoiding a traffic jam using the route bar

1. In the route bar, select the symbol for the traffic jam you want to avoid.
The traffic jam is shown on the map.

2. Select the pop-up menu button.



3. Select **Avoid** in the pop-up menu.
A new route is found that avoids the traffic jam.

Avoiding a traffic jam using the map

1. On the map view, zoom in and select the traffic jam that is on your route.
The traffic jam with an information panel is shown on the map.
2. Select the pop-up menu button.



3. Select **Avoid**.
A new route is found that avoids the traffic jam.

Advanced Lane Guidance

Note: Lane guidance is not available for all junctions or in all countries.

Advanced Lane Guidance helps you prepare for motorway exits and junctions by showing the correct driving lane for your planned route.

As you approach an exit or junction, the lane you need is shown on the screen and in the instruction panel.



Tip: To close the lane image, select anywhere on the screen.

To turn lane images off, select the **Settings** button in the Main Menu, then select **Appearance**. Switch off the **Show previews of motorway exits** setting.

Time-dependent speed limits

Some speed limits change depending on the time of day. For example, you may see the speed limit near schools decrease to 40 km/h or 25 mph in the morning between 08.00 - 09.00 and in the afternoon between 15.00 - 16.00. Where possible, the speed limit shown in the speed panel changes to show these variable speed limits.

Some speed limits change depending on driving conditions. For example, the speed limit will decrease if there is heavy traffic, or the weather conditions are bad. These variable speed limits are not shown in the speed panel. The speed shown in the speed panel is the maximum speed limit allowed in good driving conditions.

Important: The speed limit shown in the speed panel is only an indication. You must always obey the actual speed limit for the road you are on and the conditions you are driving in.

Setting your vehicle type

About My Vehicle

Important: Route planning for a specific vehicle type is available only when a truck map is installed. If a truck map is not installed, a car route is planned instead.

[My Vehicle](#) lets you choose the type of vehicle you are driving so that the route planned by your device is suitable for your vehicle.

Each vehicle type has adjustable settings for dimensions, weight and maximum speed. Routes planned by your device avoid restrictions for the vehicle type, and take into account the vehicle's specific settings. The following list shows you some examples of route restrictions:

- A route calculated for a van may be different from the route calculated for a car because of weight or height restrictions.
 - A truck may be only permitted to drive on certain roads through a city.
 - A route planned for a large vehicle, for example Bus or Truck, favours major roads, assumes you are travelling at a lower average speed and also selects routes without sharp turns.
-


Important: You must pay attention to all traffic signs, especially those relating to your vehicle's dimensions and weight. We cannot guarantee you will never encounter them on your route and ignoring such restrictions can be dangerous and illegal.

Setting your vehicle type

You can set your vehicle's type and specific settings so that the route planned by your device is suitable for your vehicle. If you want to use your Bridge in another type of vehicle, just change the vehicle type and settings.

Note: On some navigation devices you are asked to set your vehicle profile when you start your device for the first time.


1. Select **Settings** in the Main Menu, then select **My Vehicle**.

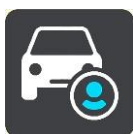

The **My Vehicle** screen is shown.

2. Select **Vehicle Type** then select your vehicle type from the list shown.

The **My Vehicle** screen is shown with the settings for the selected vehicle type.

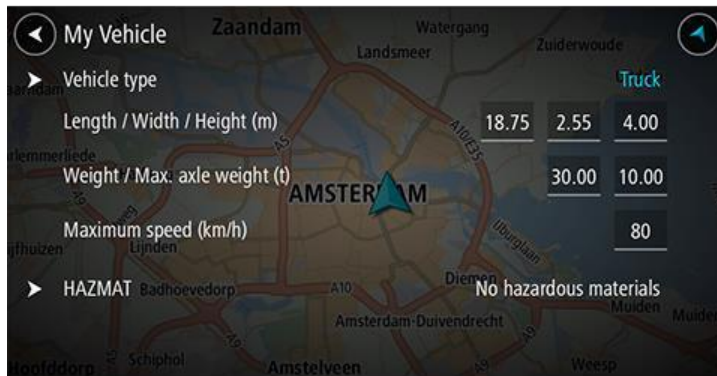

3. Select each setting and enter the correct value for your vehicle type. If a setting will not be a route restriction, for example **Maximum Speed**, you can set it to zero.

Tip: For Bus and Truck vehicle types, the dimensions, weight and maximum speed are pre-set. Adjust the settings to match your vehicle's actual specifications.

Important: Settings that are set at zero are not used to determine restrictions when a route is planned.

4. If your vehicle is a Truck transporting hazardous materials, select **HAZMAT** then select the type of hazardous material being transported.
5. Return to the map view and [plan a route](#).

A route is planned that [avoids route restrictions](#) applicable to your vehicle.

You can [find an alternative route or change the route type](#) for all types of vehicles, taking into account the vehicle's specific settings.

Planning a route for a Bus or Truck

When you [plan a route](#) and you have a Bus or Truck as your [vehicle type](#), you are shown the My Vehicle screen before your route is calculated. Check that your vehicle's settings are correct then select the continue button:



A route is planned and guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Viewing route restrictions

If your vehicle type is set to Bus or Truck, you can see route restrictions in the [guidance view](#) as you drive, and in [map view](#) when you have planned a route. In map view, zoom in to see the restricted roads.

Restricted roads are shown coloured. If your planned route uses a restricted road then the restricted section is shown dotted.

Important: You must pay attention to all traffic signs, especially those relating to your vehicle's dimensions and weight. We cannot guarantee you will never encounter them on your route and ignoring such restrictions can be dangerous and illegal.



Using Quick Search

About search

You use search to find a wide range of places and then navigate to them. You can search for the following:

- A specific address, for example, type in **123 Oxford Street, London**.
- A partial address, for example, type in **Oxford st Lon**.
- A type of place, for example, type in **petrol station** or **restaurant**.
- A place by name, for example, type in **Starbucks**.
- A postcode, for example, type in **W1D 1LL** for Oxford Street, London.
- A city to navigate to a city centre, for example, type in **London**.
- A POI (Point of Interest) near your current location, for example, type in **restaurant near me**.
- A mapcode, for example, type in **WH6SL.TR10**
- Latitude and longitude coordinates, for example, type in:
N 51° 30'31" W 0° 08'34".

Tip: To search for a specific street in the United Kingdom or the Netherlands, type in a postcode, then leave a space and then type in the house number. For example, **1017CT 35**. For other countries, postcodes are area-based and will give you a list of matching cities, towns and streets in your search results.

Planning a route to a POI using search

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route to a POI type or a specific POI using search, do the following:

1. Select the Main Menu button to open the Main Menu.




2. Select Search.



The search screen opens with the keyboard showing.

3. Use the keyboard to enter the name of the place you want to plan a route to.

Tip: If you [press and hold](#) a letter key on the keyboard, you get access to extra characters if they are available. For example, press and hold the letter "e" to access characters 3 e è é ê ë and more.

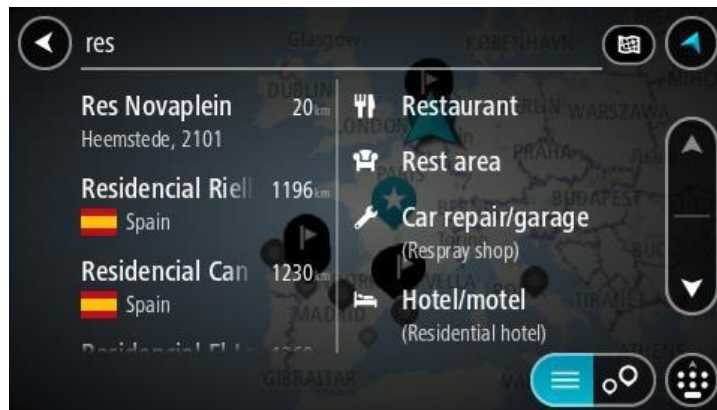

You can search for a POI (Point of Interest) type, such as a restaurant or tourist attraction. Alternatively, you can search for a specific POI, for example "Rosie's Pizzeria".


Note: When searching, the whole map is searched. If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is done, for example along the route or in a city.

4. As you type, suggestions based on what you have entered are shown in columns. You can continue typing or select a suggestion.




Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



5. Select a POI type or an individual POI. If you selected a POI type, select a POI. The location is shown on the map.

- To see more information about the POI, select the POI on the map and then select the pop-up menu button. Select **More Information** on the pop-up menu.

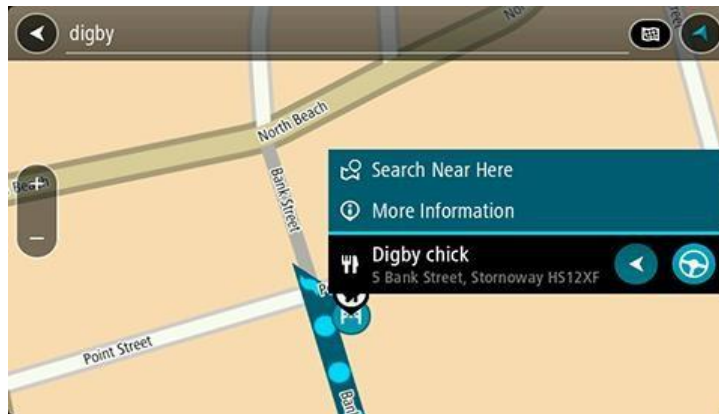

You see more information about the POI such as the phone number, full address and email.

- To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).


Planning a route to a POI using online search

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

Note: Searching online is only available on connected devices. To search online on your Bridge, you must be [connected to TomTom services](#).

If you did a [POI search](#) but could not find the POI you were looking for, you can search TomTom Places online. To find POIs by searching online, do the following:

- [Search for a POI](#) using Search in the Main Menu.
The search results are shown in two columns.

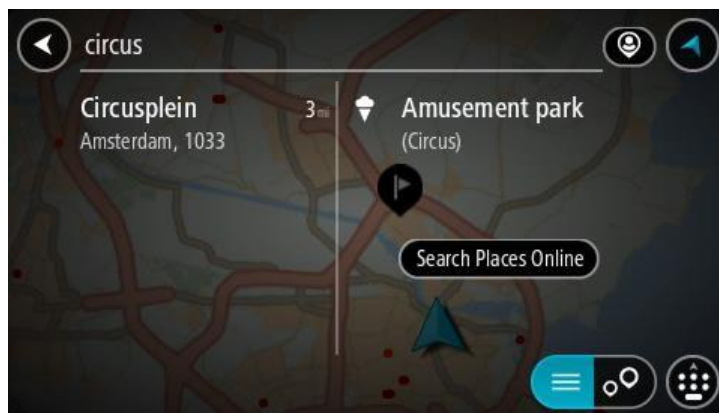

- Select **Search Places Online**.
- Use the keyboard to enter the name of the POI you want to find, then press the Search button on the keyboard.

Tip: If you [press and hold](#) a letter key on the keyboard, you get access to extra characters if they are available. For example, press and hold the letter "e" to access characters 3 e è é ê ë and more.

You can search for a POI (Point of Interest) type, such as a restaurant or tourist attraction. Alternatively, you can search for a specific POI, for example "Rosie's Pizzeria".

Note: When searching, you can search near your current location, in a town or city, or near your destination. If you want to change how the search is done, select the button to the right of the search box.

The search results are shown in a column.




Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



4. Select an individual POI from the list.
The location is shown on the map.
5. To see more information about the POI, select the POI on the map and then select the pop-up menu button. Select **More Information** on the pop-up menu.

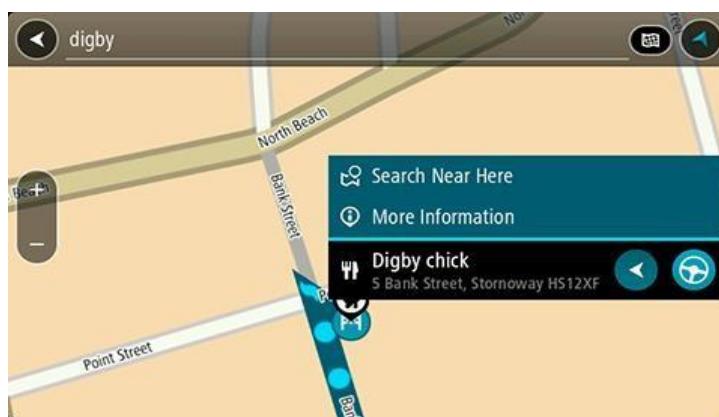

You see more information about the POI such as the phone number, full address and email.

6. To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.


Tip: You can add a [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Entering search terms

Select **Search** in the [Main Menu](#) to start searching for addresses and POIs. The search screen opens showing the device keyboard and the following buttons:

Tip: Hide the device keyboard to show the whole search screen.

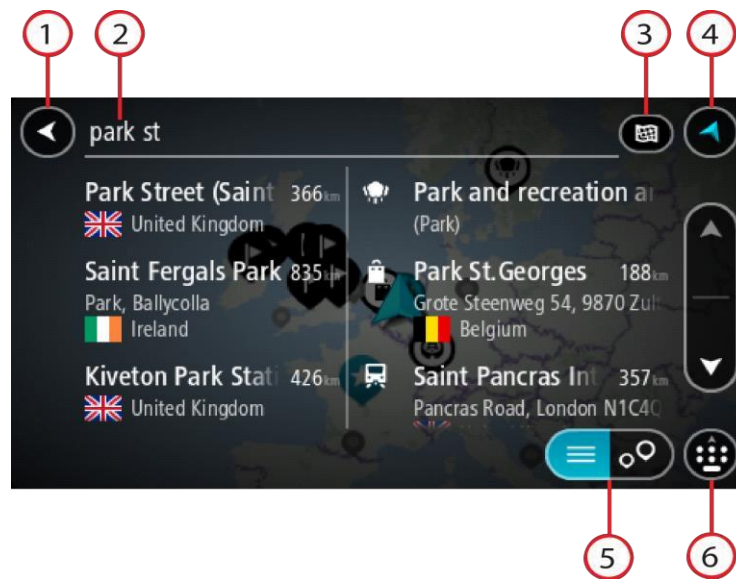

1. Back button.

Select this button to go back to the previous screen.

2. Search input box.

Enter your search term here. As you type, matching addresses and POIs are shown.

Tip: If you [press and hold](#) a letter key on the keyboard, you get access to extra characters if they are available. For example, press and hold the letter "e" to access characters 3 e è é ê ë and more.

Tip: To edit, select a word you have already typed to place the cursor. You can then insert or delete characters.

3. Type of search.

By default, the whole of the current map is searched. Once you have used search, the last search type you selected is used. Select this button to change the type of search to any of the following:



Whole map

Select this option to search the whole of your current map with no limit to the search radius. Your current location is the centre of the search. The results are ranked by exact match.



Near me

Select this option to search with your current GPS location as the search centre. The results are ranked by distance.



In town or city

Select this option to use a town or city as the centre for your search. You need to enter the town or city name using the keyboard. When you have selected the town or city from the results list, you can search for an address or POI in that city.



Along route

When a route has been planned, you can select this option to search along your route for a specific type of location, for example, petrol stations. When prompted, enter the type of location and then select it in the right-hand column to carry out the search.



Near destination

When a route has been planned, you can select this option to use your destination as the centre for your search.



Latitude Longitude

Select this option to enter a pair of latitude longitude coordinates.

4. View button.

Select this button to return to the [map view](#) or [guidance view](#).

5. List/map button.

Select this button to switch between showing the results in a list or showing the results on the map.

6. Show/hide keyboard.

Select this button to show the keyboard. Hide the keyboard using the device's back function.

Tip: To cancel a search, select the map/guidance view button in the top right-hand corner of the screen.



Working with search results

Your search results are shown in two columns.


Address and city matches are shown in the left-hand column, and POIs, types of POIs and Places are shown in the right-hand column. Recent destinations and saved places are also shown in your search results.

Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:

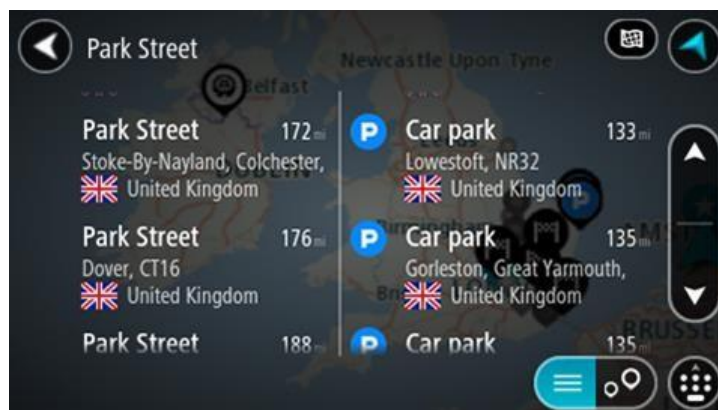

When you select an address from the list of search results, you can choose to show it on the map, add a crossroad or plan a route to that chosen location. To get an exact address you can add the house number.

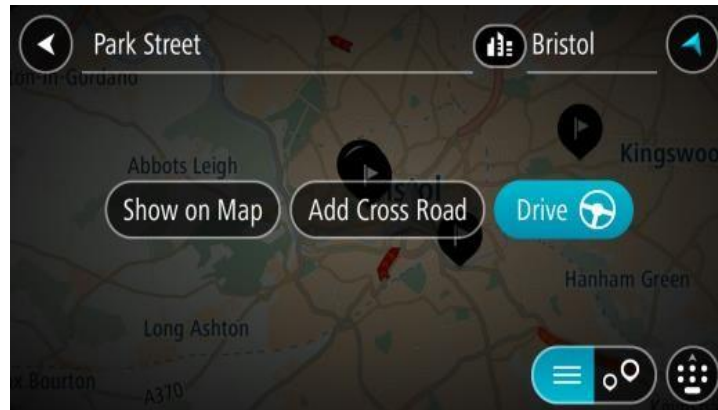

If you show the result on the map, you can use the pop-up menu to [add the location](#) to My Places. If a route is already planned, you can add the location to your current route.



Note: The best search results are shown on the map. When you zoom in, the lower ranked search results are gradually shown.

About postcodes

When searching using a postcode, your results depend on the type of postcode used in the country that you are searching in.

The following types of postcodes are used:

- Postcodes that navigate you to a street or part of a street.
- Postcodes that navigate you to an area comprising, for example, a single town, several villages in a rural area or a district in a large city.

Postcodes for streets

Countries such as the Netherlands and the United Kingdom use this type of postcode. When you search using this type of postcode, enter the postcode, then leave a space and then optionally enter the house number. For example, "1017CT 35". Your device then plans a route to a specific house or building on a specific street.

Postcodes for areas

Countries such as Germany, France and Belgium use this type of postcode. If you search using a postcode for an area, your results include all the streets in a city district, the whole town, or the villages within that postcode.

You may get results from multiple countries if you enter a postcode for an area.

Note: If you search using a postcode for an area, you will not get a specific address in your results.

This type of postcode is still very useful in reducing the number of search results. For example, a search for Neustadt in Germany returns a long list of possible results. Adding a space followed by the postcode for an area narrows the results down to the Neustadt that you are looking for.

As another example, if you want to search in a city, enter a postcode for an area and select the city centre you are searching for from the results.

About mapcodes

In countries where roads and houses have no names or addresses, you can use a mapcode instead. A mapcode represents a location.

Every location on Earth, including those in the sea like islands and oil rigs, can be represented by a mapcode. Mapcodes are short, and easy to recognise, remember and communicate. They are precise to a few metres, which is good enough for every-day use.

Go to mapcode.com for instructions on how to find the mapcode for a location.

Mapcodes are more precise and more flexible than the address on a business card. You can choose a location that you want to associate with your address, for example, the main entrance or the entrance to a car park.

List of POI type icons

Legal and financial services



Court house



Cash dispenser



Legal - Solicitors



Financial institution



Legal - other services

Food services



Convenience store



Fast food restaurant



Restaurant



Chinese restaurant

Accommodation



Hotel or motel



Luxury hotel



Camping ground



Economy chain hotel

Emergency services



Hospital or polyclinic



Dentist



Police station



Veterinarian



Doctor



Fire station

Car-related services



Outside parking



Petrol station



Parking garage



Car wash



Car dealer



Vehicle inspection centre



Rental car facility



Electrical car charging point(s)



Rental car parking



Car repair facility

Other services



Embassy



Pet services



Government office



Telecommunication



Company



Community service



Post office



Pharmacy



Shopping centre



Beauty services



Tourist information office



Shop

Education



College or university



School



Library



Convention centre

Leisure



Casino



Winery



Theatre



Tourist attraction



Cinema



Zoo



Concert hall



Amusement park



Museum



Exhibition centre



Opera



Cultural centre



Nightlife



Leisure centre



Children's Farm

Sport



Playing field



Swimming pool



Mountain peak



Water sports



Beach



Tennis court



Park or recreation area



Ice skating rink



Yacht basin or marina



Sports centre



Stadium



Golf course

Religion



Church



Place of worship

Travel



Railway station



Mountain pass



Airport



Scenic or panoramic view



Ferry terminal



Postcode

Note: Not used in all countries.



Border crossing



Residential area



Bus station



City centre



Toll gate



Electrical car charging stations



Rest area



Truck stop

Planning a route

Planning a route to an address using search

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route to an address using search, do the following:

1. Select the Main Menu button to open the Main Menu.




2. Select Search.



The search screen opens with the keyboard showing.

3. Use the keyboard to enter the name of the place you want to plan a route to.

Tip: If you [press and hold](#) a letter key on the keyboard, you get access to extra characters if they are available. For example, press and hold the letter "e" to access characters 3 e è é ê ë and more.

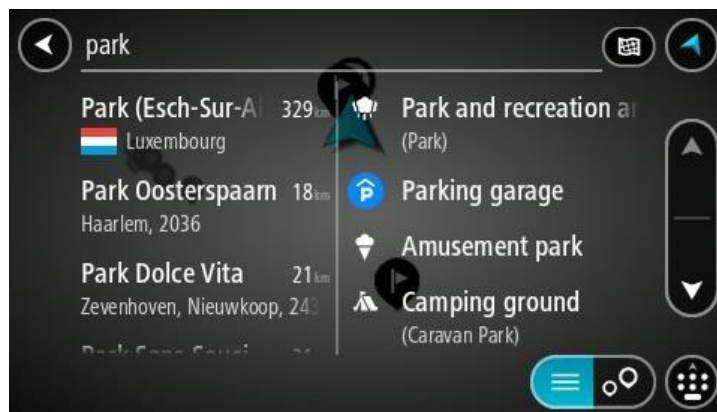

You can search for an address, town, city, [postcode](#) or [mapcode](#).

Tip: To search for a specific street in the United Kingdom or the Netherlands, type in a post-code, then leave a space and then type in the house number. For example, **1017CT 35**. For other countries, postcodes are area-based and will give you a list of matching cities, towns and streets in your search results.

Note: When searching, the whole map is searched. If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is done, for example, to being along the route or in a city.

4. As you type the address, suggestions based on what you have entered are shown in columns. You can continue typing or select a suggestion.

Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



5. Select an address suggestion.



6. Enter the house number if you have one and haven't entered it already.



Tip: If you enter a house number that is not found, then the number appears red. The nearest house number that is found is shown in the Drive button. You can enter a new house number, or you can select **Drive/Ride** to drive to the nearest house number.

7. Select **Drive/Ride** depending on which device you are using.

A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Planning a route to a city centre

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route to a city centre using search, do the following:

1. Select the Main Menu button to open the Main Menu.




2. Select Search.



The search screen opens with the keyboard showing.

3. Use the keyboard to enter the name of the city or town you want to plan a route to.

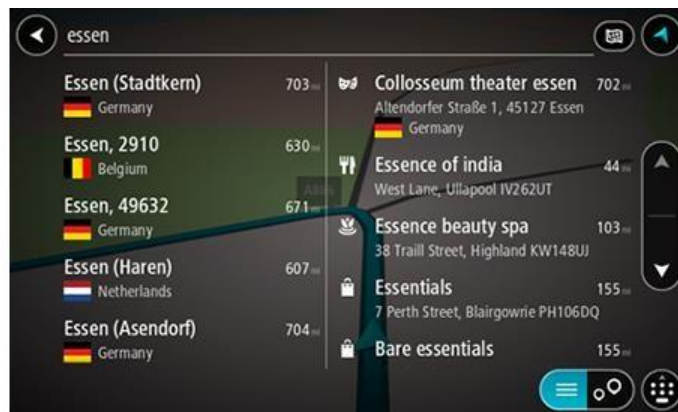

You can search for a town, city, or postcode.


Tip: To search for a specific city you can use the city's postcode or the country. For example, searching for Essen will return many results. If you search for Essen 2910 or Essen Belgium then that city will be at the top of the results. You can then search in the city.

Tip: When searching, the whole map is searched. If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is done, for example, to being along the route or in a city.

4. As you type the address, suggestions based on what you have entered are shown in columns. You can continue typing or select a suggestion.


Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:




5. Select the city in the left-hand column.

The city name is shown in the right side of the search input box, and the city centre POI is shown below in the right-hand column.

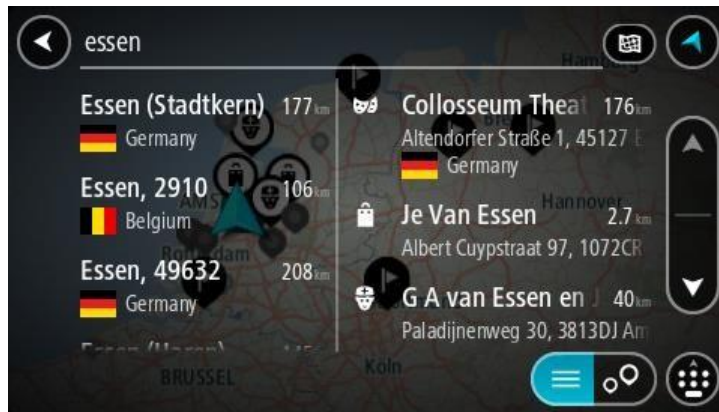

6. Select the city centre POI.
The city centre location is shown on the map.

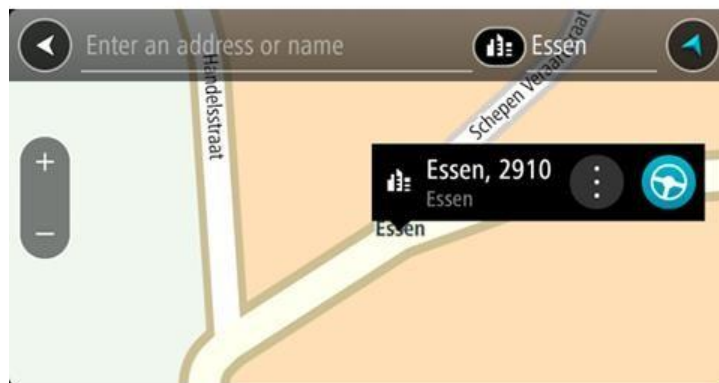

7. Select **Drive/Ride** depending on which device you are using.
A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Planning a route to a POI using search

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route to a POI type or a specific POI using search, do the following:

1. Select the Main Menu button to open the Main Menu.




2. Select Search.



The search screen opens with the keyboard showing.

3. Use the keyboard to enter the name of the place you want to plan a route to.

Tip: If you [press and hold](#) a letter key on the keyboard, you get access to extra characters if they are available. For example, press and hold the letter "e" to access characters 3 e è é ê ë and more.

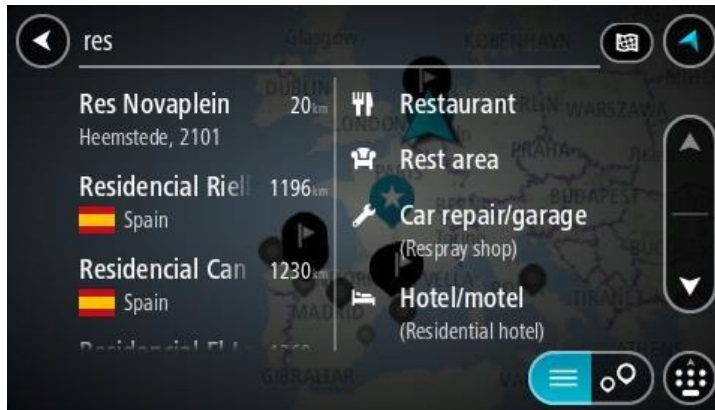

You can search for a POI (Point of Interest) type, such as a restaurant or tourist attraction. Alternatively, you can search for a specific POI, for example "Rosie's Pizzeria".


Note: When searching, the whole map is searched. If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is done, for example along the route or in a city.

4. As you type, suggestions based on what you have entered are shown in columns. You can continue typing or select a suggestion.



Tip: To see more results, hide the keyboard or scroll down the results list.


Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



5. Select a POI type or an individual POI. If you selected a POI type, select a POI.

The location is shown on the map.

6. To see more information about the POI, select the POI on the map and then select the pop-up menu button. Select **More Information** on the pop-up menu.

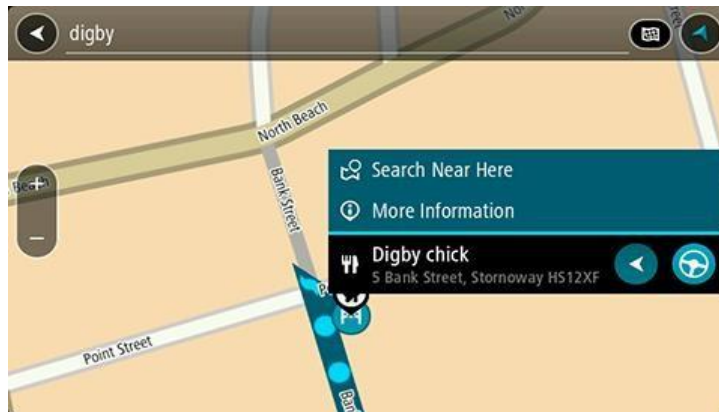

You see more information about the POI such as the phone number, full address and email.

7. To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).


Planning a route to a POI using online search

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

Note: Searching online is only available on connected devices. To search online on your Bridge, you must be [connected to TomTom services](#).

If you did a [POI search](#) but could not find the POI you were looking for, you can search TomTom Places online. To find POIs by searching online, do the following:

1. [Search for a POI](#) using Search in the Main Menu.
The search results are shown in two columns.

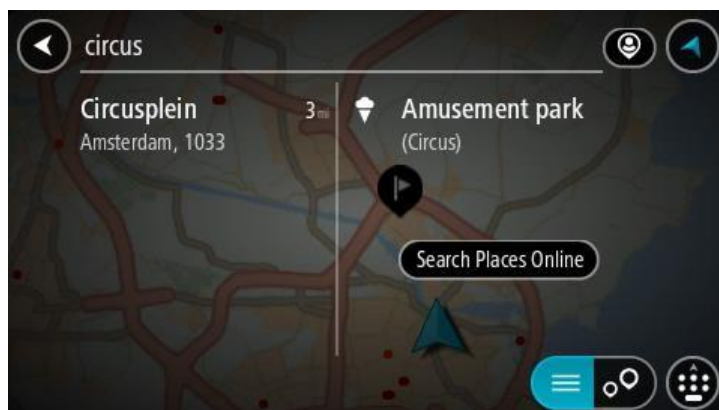

2. Select **Search Places Online**.

- Use the keyboard to enter the name of the POI you want to find, then press the Search button on the keyboard.

Tip: If you [press and hold](#) a letter key on the keyboard, you get access to extra characters if they are available. For example, press and hold the letter "e" to access characters 3 e è é ê ë and more.

You can search for a POI (Point of Interest) type, such as a restaurant or tourist attraction. Alternatively, you can search for a specific POI, for example "Rosie's Pizzeria".

Note: When searching, you can search near your current location, in a town or city, or near your destination. If you want to change how the search is done, select the button to the right of the search box.

The search results are shown in a column.




Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



- Select an individual POI from the list. The location is shown on the map.
- To see more information about the POI, select the POI on the map and then select the pop-up menu button. Select **More Information** on the pop-up menu.

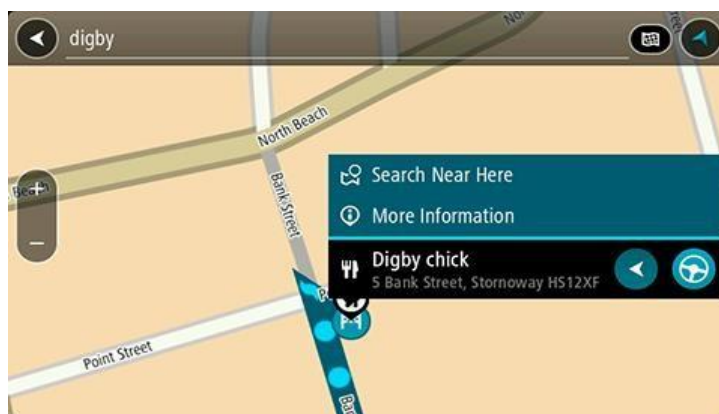

You see more information about the POI such as the phone number, full address and email.

- To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can add a [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).


Planning a route using the Internet browser

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.


Note: This feature is not available on all devices.

You can search the Internet using the Bridge Internet browser, then select text from the search results to share with the TomTom Navigation app. To plan a route using the Internet browser, do the following:

1. Open the Bridge Internet browser and search for a place or POI.
2. Select the POI address or name.

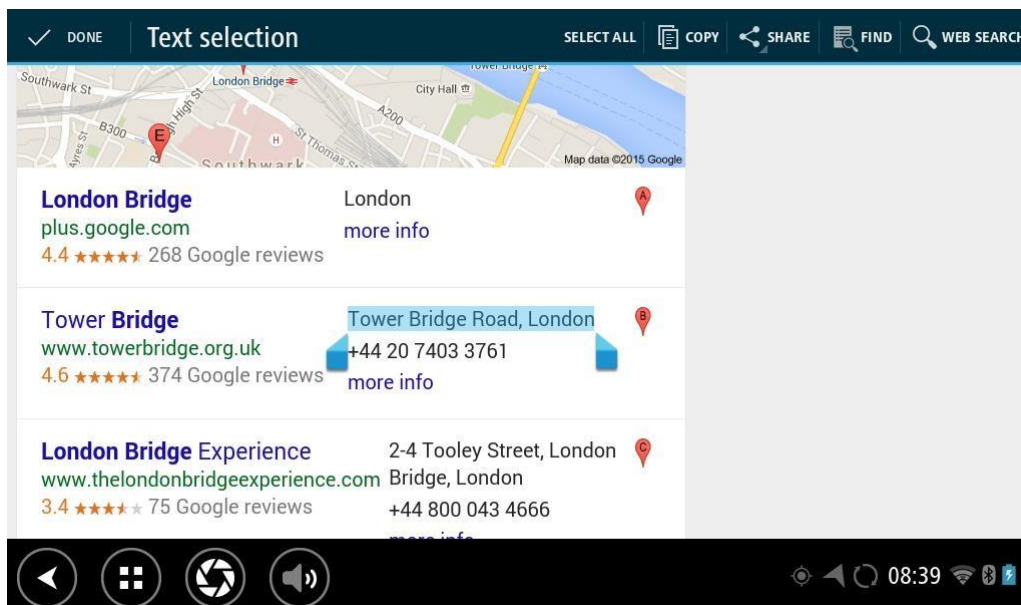


3. Select the SHARE button to show the share options.

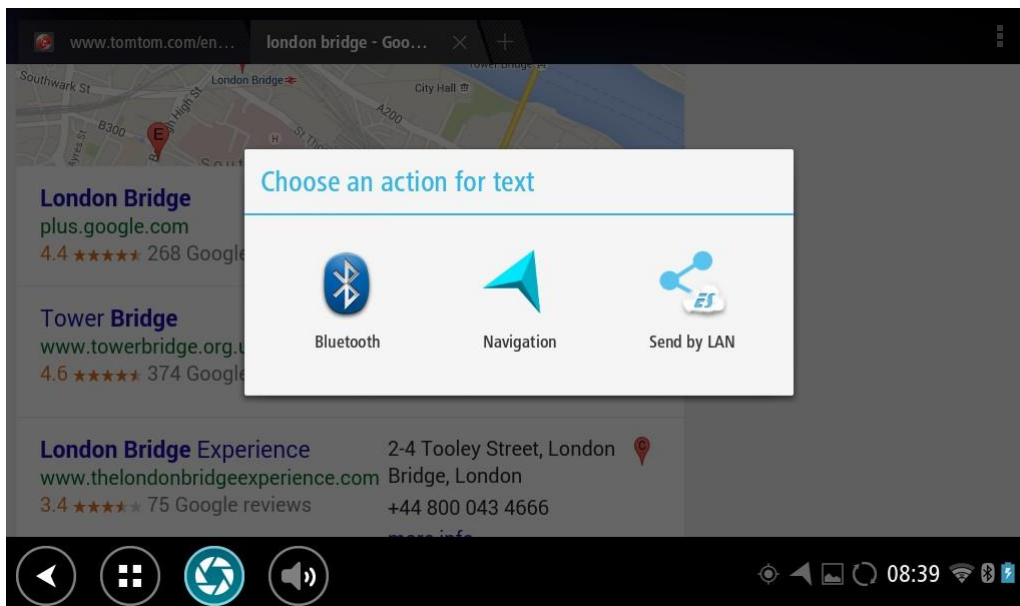


4. Select **Navigation**.

The Navigation app starts and the search screen opens with the keyboard showing. The selected text appears at the top of the screen and the search suggestions based on the selected text are shown in columns.

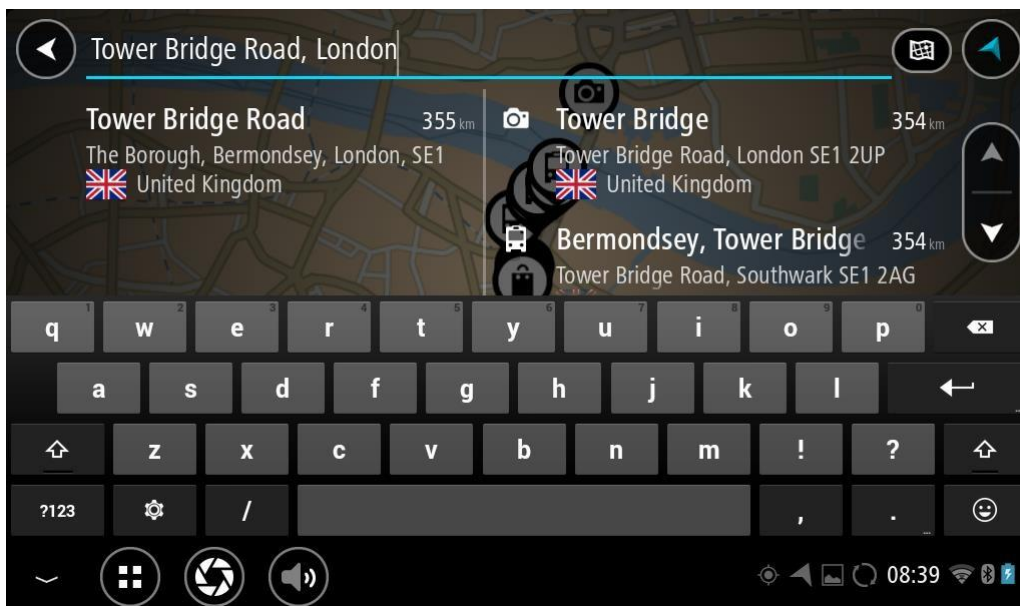

Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



5. Select an address suggestion and enter the house number if you have one and haven't entered it already.



Tip: If you enter a house number that is not found, then the number appears red. The nearest house number that is found is shown in the Drive button. You can enter a new house number, or you can select Drive to drive to the nearest house number.

6. Select Drive.

A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Planning a route using the map

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route using the map, do the following:


1. [Move the map](#) and zoom in until you can see the destination that you want to navigate to.

Tip: You can also select a map symbol to open the pop-up menu, then select the **Drive/Ride** button to plan a route to that location.




2. When you have found your destination on the map, select it by pressing and holding the screen for about one second.

A pop-up menu shows the nearest address.

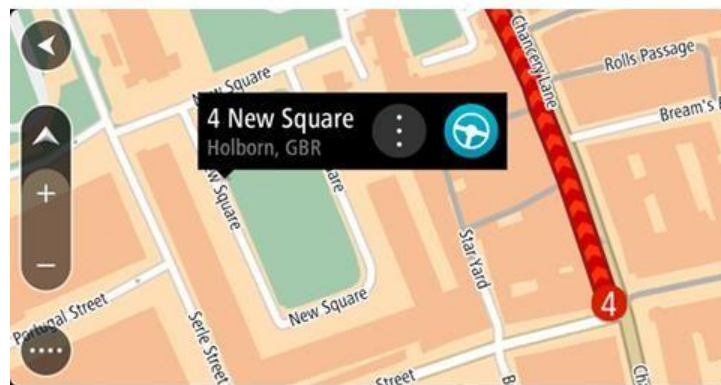

3. To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: You can use the location you selected in other ways, such as adding it to [My Places](#), by selecting the pop-up menu button.

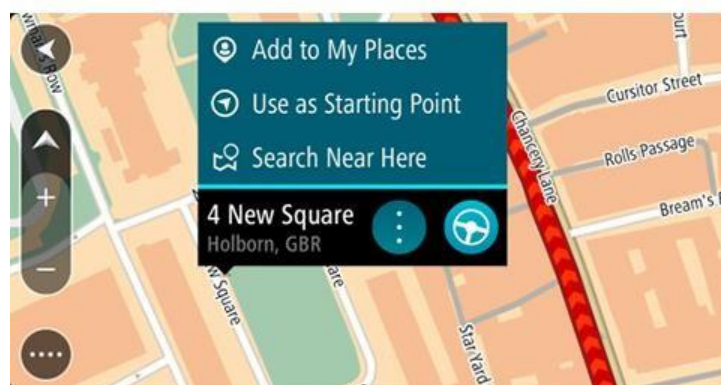

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Planning a route using My Places

To navigate to one of [My Places](#) from your current location, do the following:

1. Select the Main Menu button to open the Main Menu.



2. Select **My Places**.




A list of all your Places opens.



3. Select the Place you want to navigate to, for example Home.

Your chosen Place is shown on the map with a pop-up menu.

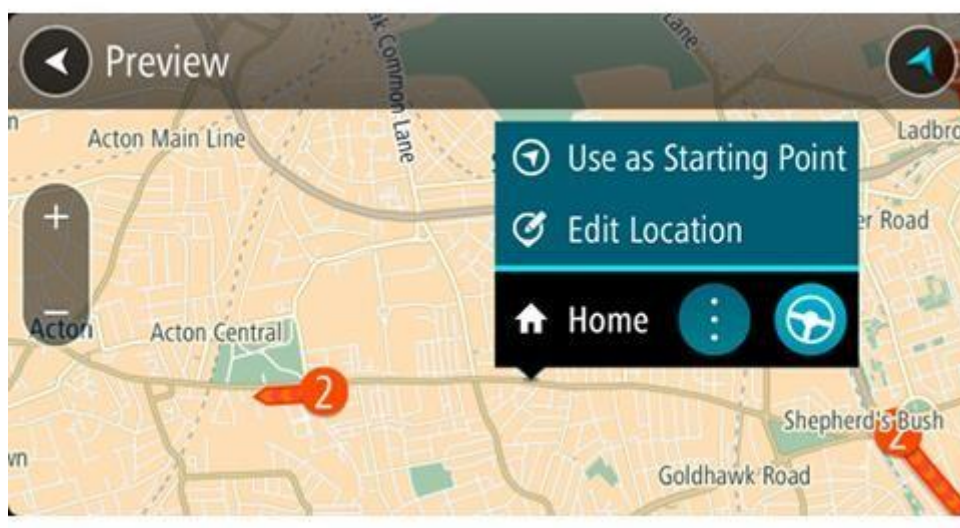

4. To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Planning a route using coordinates

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route using a pair of coordinates, do the following:

1. Select the Main Menu button to open the Main Menu.



2. Select **Search**.



The search screen opens with the keyboard showing.

3. Select the type of search button to the right of the search box.



4. Select **Latitude Longitude**.
5. Type in your pair of coordinates. You can enter any of these coordinate types:

- Decimal values, for example:
N 51.51000 W 0.13454
51.51000 -0.13454

Tip: For decimal values you don't have to use a letter to indicate the latitude and longitude. For locations west of the 0 meridian and locations south of the equator, use a minus sign (-) before the coordinate.

- Degrees, minutes and seconds, for example:
N 51° 30'31" W 0° 08'34"
- GPS standard coordinates, for example:
N 51 30.525 W 0 08.569


Note: The bar below the coordinates goes red if you enter coordinates that are not recognised by your Bridge.

6. As you type in the coordinates, suggestions are shown based on what you have entered. You can continue typing or select a suggestion.

Towns and roads are shown on the left, POIs are shown on the right.

Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



7. Select a suggestion for your destination.
The location is shown on the map.
8. To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Planning a route using a mapcode

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To plan a route using a mapcode, do the following:

1. Select the Main Menu button to open the Main Menu.



2. Select **Search**.



The search screen opens with the keyboard showing.


3. Type in your mapcode. You can enter any of these mapcode types:
 - International, for example, WH6SL.TR10.
 - Country-specific, for example, GBR8MH.51.
 - Alternative country-specific, for example, GBR28.Y6VH or GBRLDGZ.VXR.

Tip: All the mapcodes in this example are for the same location - Edinburgh Castle in the UK. See [About mapcodes](#) for information on how to get a mapcode for a location.

4. As you type in the mapcode, suggestions are shown based on what you have entered. You can continue typing or select a suggestion.
Towns and roads are shown on the left, POIs are shown on the right.

Tip: To see more results, hide the keyboard or scroll down the results list.

Tip: You can switch between seeing the results on the map or in a list by selecting the list/map button:



5. Select a suggestion for your destination.
6. To plan a route to this destination, select **Drive/Ride** depending on which device you are using. A route is planned and then guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Tip: If your destination is in a different time zone, you see a plus (+) or a minus (-) sign and the time difference in hours and half hours in the [arrival information panel](#). The estimated time of arrival is the local time at your destination.

Tip: You can [add a stop to a route](#) that you have already planned.

Tip: You can save a route using [My Routes](#).

Finding an alternative route

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To find an alternative route, do the following:

1. Plan a route as usual.
2. On the [map view](#), select the route itself.
3. Select the pop-up menu button to open the menu.
4. Select **Alternative Route** and then select **Find alternative**.

Up to three alternative routes are shown on the map view. Each alternative route shows the difference in travel time in a balloon.

Tip: Information from the Lifetime [Traffic](#) service is used when calculating alternative routes. Any route that is 50% longer in time than the original route is not shown.



5. Select your chosen route by tapping on the time balloon. Guidance to your destination begins. As soon as you start driving, the [guidance view](#) is shown automatically.

Note: There are two other ways of finding alternative routes:

1. Select **Current Route** in the Main Menu, followed by **Find Alternative**.
2. If your device has voice control, say "Find alternative".

Planning a route in advance

You can plan a route in advance before you drive it. You can save the route as part of your [My Routes](#) list.

To plan a route in advance, do the following:

1. Select the Main Menu button to open the Main Menu.



2. Select **Search**.




The search screen opens with the keyboard showing.

Tip: If you don't want to use search to choose your starting point and destination, go to the map view and press and hold to select a location.

3. Use the keyboard to enter the name of the location you want to use as a starting point.
4. Select an address or POI suggestion.
5. Select **Show on Map**.
6. Select the pop-up menu button.

A pop-up menu shows a list of options.

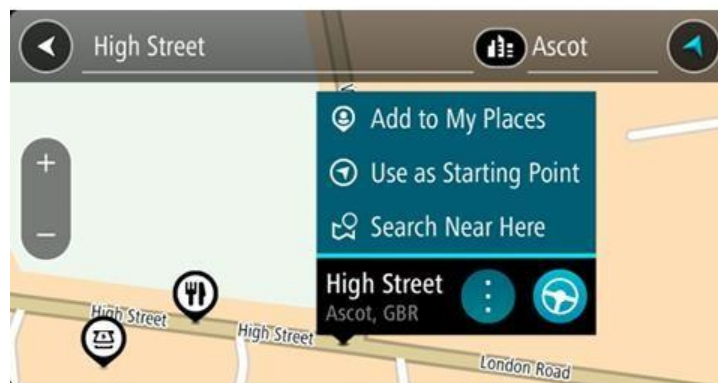

7. Select **Use as Starting Point**.
8. Repeat the search steps to choose your destination, and then select **Drive/Ride** in the pop-up menu.

Your route is planned using your chosen starting point and destination. The estimated journey time is shown at the top of the route bar.

Tip: Stops, POIs, Places and the destination can all be selected as starting points using their pop-up menus.

Tip: You can [save the route in My Routes](#).

9. To drive to the starting point, select **Drive/Ride** at the top of the screen.
The starting point of the route is converted to your first stop and then the route is planned. Guidance to your destination begins from your current location. As soon as you start driving, the guidance view is shown automatically.

Changing the starting point to be your current location

1. Select the starting point of the route in the map view.
2. Select the pop-up menu button.

A pop-up menu shows a list of options.



3. Select **Remove Starting Point**.

Your route is replanned with your current location as the starting point. The original starting point is removed from your route.

Changing the starting point into a stop

1. Select the starting point on the route in the map view.
2. Select the pop-up menu button.

A pop-up menu shows a list of options.



3. Select **Change to a Stop**.

Your route is replanned with the starting point changed into a stop.

Finding a car park

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To find a car park, do the following:

1. Select the Main Menu button to open the Main Menu.



2. Select Parking.




The map opens showing the locations of car parks.



If a route is planned, the map shows car parks near your destination. If a route isn't planned, the map shows car parks near your current location.

You can change the screen to show a list of car parks by pressing this button:




You can select a car park from the list to locate it on the map.


Tip: You can scroll down the list of results using the scroll bar on the right side of the screen.



If you want to change how the search is done, select the button to the right of the search box. You can then change where the search is carried out, for example, to search near you or the whole map.

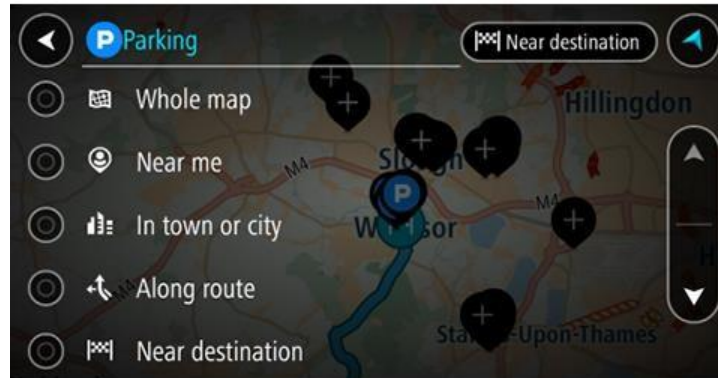

3. Select a car park from the map or the list.
A pop-up menu opens on the map showing the name of the car park.

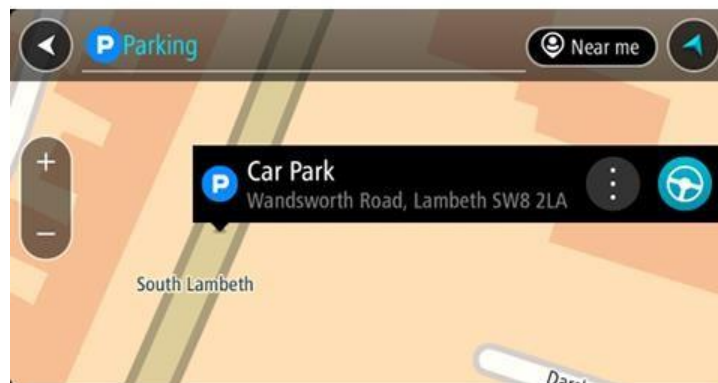

4. Select **Drive/Ride** depending on which device you are using.
A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: You can add a car park as a stop on your route by using the pop-up menu.

Finding a petrol station

Important: In the interest of safety and to avoid distractions while you are driving, you should always plan a route before you start driving.

To find a petrol station, do the following:

1. Select the Main Menu button to open the Main Menu.



2. Select **Petrol Station**.




The map opens showing the locations of petrol stations.




If a route is planned, the map shows petrol stations along your route. If a route isn't planned, the map shows petrol stations near your current location.

You can change the screen to show a list of petrol stations by pressing this button:



You can select a petrol station from the list to locate it on the map.

Tip: You can scroll down the list of results using the scroll bar on the right side of the screen.

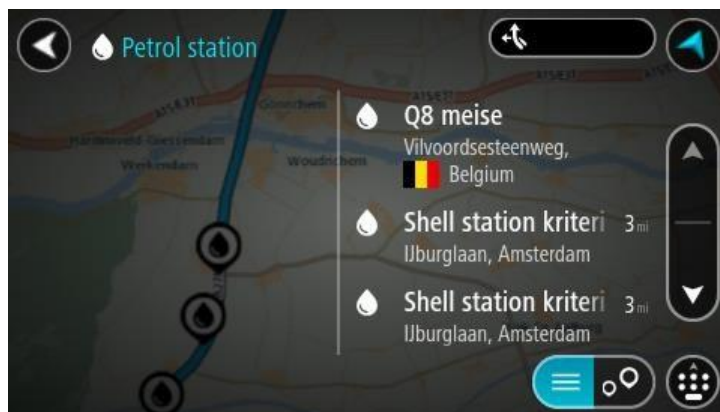


If you want to change how the [search](#) is done, select the button to the right of the search box. You can then change where the search is carried out, for example, to search near you or the whole map.



3. Select a petrol station from the map or the list.

A pop-up menu opens on the map showing the name of the petrol station.

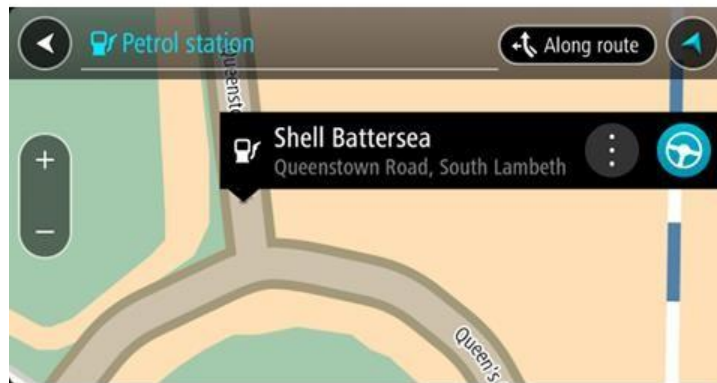

4. Select **Drive/Ride** depending on which device you are using.

A route is planned and then guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

Tip: You can add a petrol station as a stop on your route by using the pop-up menu. A petrol station that is a stop on your route has a blue icon.

Changing your route

The Current Route menu

When you have planned a route or track, select the **Current Route** or **Current Track** button in the Main Menu to open the Current Route or Current Track Menu.

The following buttons are available in the menu:

Clear Route / Clear Track



Select this button to clear the currently planned route or track. The Current Route Menu closes and you return to the [map view](#).

Skip Next Stop



Select this button to [skip the next stop](#) on your route.

Find Alternative



You see this button when you have planned a route. Select this button to show up to three [alternative routes](#) on the [map view](#).

Avoid Blocked Road



Select this button to [avoid an unexpected obstacle](#) that is blocking the road on your route.

Avoid Part of Route



Select this button to [avoid part of a route](#).

Avoid Toll Roads and More



Select this button to avoid some [types of route features](#) that are on your currently planned route. These include ferries, toll roads and unpaved roads.

You can also [avoid route features](#) using the route bar.

Show Instructions

Select this button to see a list of turn-by-turn text instructions for your planned route.

The instructions include the following:

- Your current location.
- Street names.
- Up to two road numbers shown in road shields whenever available.
- An instruction arrow.
- An instruction description.
- The distance between two consecutive instructions.
- Exit number.
- The full addresses of stops on your route.



Tip: Select an instruction to see a preview of that section of the route also [add a stop to your route directly from the map](#).

You can also select the instruction panel in [the guidance view](#) to see turn-by-turn text instructions.

**Add Stop to Route
Add to My Routes**

Select this button to add a stop to your currently planned route. You can also [add a stop to your route directly from the map](#). If you plan a new route that has not already been saved, you see this button. Select this button to save this route as part of your [My Routes](#) list.

**Save Changes to
Route**

If you make a change to a [My Route](#), you see this button. Select this button to save the changes.

Change Route Type

Select this button to change the type of route used to plan your route. Your route will be recalculated using the new route type.

Reorder Stops

Select this button to see the lists of stops for your current route. You can then [change the order of the stops on your route](#).

For a route without stops, you can also select this button to reverse your route.

Drive to Route or Track



Select **Drive to Route** to plan a route from your current location to the starting point of a [My Route](#). The starting point is converted to a stop.

Drive to Track plans a route to the nearest point of the track from your current position.

Drive to Starting Point



On the Current Track menu, select this button to plan a route to the starting point of the track. The starting point is converted to a stop. For more information, see [Navigating using a track](#).

Play Route or Track Preview



Select this button to watch a preview of your planned route or track.

Stop Route or Track Preview



Select this button to stop the preview of your planned route or track.

Avoiding a blocked road

If there is a blocked road on your route you can change your route to avoid it.

1. In the [guidance view](#), select the current location symbol or the speed panel.

Tip: The speed panel is only shown when you have started driving on your route.

2. Select **Avoid Blocked Road**.

A new route is found that avoids the blocked road. You may get shown up to two alternatives depending on the road network between you and your destination.

The new route is shown on the map view with the difference in travel time in a balloon.

Note: It may not be possible to find an alternative route around the blocked road if none exists.

3. Select the new route by selecting the time balloon.

Guidance to your destination resumes avoiding the blocked road. As soon as you start driving, the guidance view is shown automatically.

Avoiding part of a route

If part of a road is blocked or you wish to avoid part of a route, you can select a specific section of a route to avoid.

1. Select the Main Menu button to open the Main Menu.



2. Select **Current Route**.



3. Select **Avoid Part of Route**.



A screen opens showing a list of the sections that comprise your current route.

4. Select the section of the route that you want to avoid.

A preview shows you the section you have chosen on the map.

5. Select **Avoid**.

A new route is found that avoids your chosen route section. The new route is shown on the map view.

Note: It may not be possible to find an alternative route around the route section if none exists.

Guidance to your destination resumes avoiding your chosen route section. As soon as you start driving, the guidance view is shown automatically.

Types of route

Select **Change Route Type** to change the type of route planned to your current destination. Your route is recalculated using the new route type.

You can select the following types of route:

Important: If you have Bus or Truck as your [vehicle type](#), you can only choose route types **Fastest route** or **Shortest route**.

- **Fastest route** - the fastest route to your destination. Your route is constantly checked taking into account the traffic conditions.
- **Shortest route** - the shortest route to your destination. This may take much longer than the fastest route.
- **Most eco-friendly route** - the most fuel-efficient route.
- **Avoid Motorways** - this type of route avoids all motorways.
- **Walking Route** - this type of route is optimised for walking.
- **Bicycle Route** - this type of route is optimised for bicycles.

You can set the default route type in the [Settings](#) Menu.

Route features

You can choose to avoid some features that are on your currently planned route. You can avoid the following route features:

- **Toll Roads**
- **Ferries and car shuttle trains**

- **Carpool Lanes**
- **Unpaved Roads**

Note: Carpool lanes are sometimes known as High Occupancy Vehicle Lanes (HOV lanes) and are not present in every country. To travel on these lanes, you may need to have more than one person in the car, for example, or the car may need to use environmentally-friendly fuel.

If you choose to avoid a route feature, a new route is planned.

In Route Planning in the Settings Menu, you can set how each route feature is handled when a new route is planned.

Avoiding a route feature on your route

You can avoid a route feature that is on your route.

Note: It may not be possible to find an alternative route around the route feature if none exists.

1. In the route bar, select the symbol for the route feature you want to avoid.
The route feature is shown on the map.
2. Select the pop-up menu button.



3. Select **Avoid** in the pop-up menu.
A new route is found that avoids the route feature.

Adding a stop to your route from the current route menu

1. In the Main Menu, select **Current Route**.
2. Select **Add Stop to Route**.
The map view is shown.
3. To select a stop, do one of the following steps:
 - Zoom in on the map, then press and hold to select a location. In the pop-up menu, select **Add to Current Route**.



- Select **Search** and search for a location. When you have found a location, select the **Add Stop to Route** button.

Your route is recalculated to include your stop.

Adding a stop to your route using the map

1. Press the [switch view button](#) to show the map.
Your complete route is shown on the map.
2. Zoom in on the map, then press and hold to select a location.
3. Select the pop-up menu button.
4. Select **Use in Route**.
5. Select **Add to Current Route**.



Your route is recalculated to include your stop.

Deleting a stop from your route

1. Press the [switch view button](#) to show the map.

Your complete route is shown on the map.

2. In the [route bar](#), press the stop you want to delete.
The map zooms in to the stop and shows a pop-up menu.

Tip: If you select the wrong stop press the back button to return to the map.

3. Select **Delete This Stop**.
The stop is deleted and your route is recalculated.

Skipping the next stop on your route

Tip: To make it easy to quickly skip a stop, move the button **Skip Next Stop** to the first screen of the Main Menu.

1. In the Main Menu, select **Current Route**.
2. Select **Skip Next Stop**.
The map view is shown. The next stop on your route is deleted and your route is recalculated.

Reordering stops on a route

1. In the Main Menu, select **Current Route**.
2. Select **Reorder Stops**.
The map view is shown with the route cleared. The starting point, destination and all the stops are shown.
3. Select the stops one by one in the order you wish to drive them.
The symbols change to a flag as you select each stop. The last stop you select becomes your destination.
Your route is recalculated with the stops in the changed order.

My Routes

About My Routes

My Routes provides an easy way to save and retrieve routes and tracks.

You may want to use My Routes in one or more of the following situations:


- **While working** - Your job involves driving several routes with multiple stops on a daily basis. Your routes can change and you need to be flexible and be able to change the order of your stops or change the planned route.
- **While commuting to work** - You want to add one or two regular stops between home and work. Your route back home in the evening is the reverse of your route to work in the morning.

Routes can be created and saved on your Bridge. You can also use a tool such as Tyre Pro to create and edit routes and tracks.

About routes and tracks

The term "route" includes two types of route from one place to another:

- **Routes** have a starting point and a destination, and perhaps some stops. Your device calculates your preferred type of route between all these points, for example, the fastest or most economical. You can edit a route by, for example, adding stops or moving the starting point. Routes can be imported but cannot be exported from your device.



- **Tracks** also have a starting point and a destination, but have no stops. Your route follows the track as closely as possible, ignoring your preferred type of route and traffic conditions. You can only edit tracks using tools such as Tyre Pro. Tracks can be imported and exported from your device.



Tip: Tracks have a dotted arrow!

About GPX and ITN files

GPX files (GPS exchange format)

GPX files contain a very detailed recording of where you have been on your track, including any off-road locations. GPX files become tracks after import.

Using GPX files

There are several things you can do with your GPX file:

- Use a tool such as Tyre Pro to view your track file.
- Export to a memory card or directly to your computer, then use your computer to view the file using software such as Google Earth.

Note: While viewing your recording, you may notice that the recorded GPS locations do not always correspond with the roads. This can happen for several reasons. Firstly, your device tries to keep the files small and this can cause a slight loss of data precision. Secondly, your device records the actual data from the GPS chip for an accurate representation of where you've been, rather than what you see on your screen. Thirdly, the software with which you view the recording may have the maps misaligned.

- Share the file with friends by exporting it.

Note: Tracks can be [imported](#) and [exported](#).

ITN files (TomTom's own Itinerary file format)

An ITN file contains less detail than a GPX file. An ITN file can contain a maximum of 255 locations which is enough to recreate a route accurately. ITN files become routes after import.

Using ITN files

There are several things you can do with your ITN file:

- You can import an ITN file onto your TomTom Bridge so you can travel that same route again and get navigation instructions.
- Use tools such as Tyre Pro to view your route.


Note: Routes can be [imported](#) but cannot be exported.

Saving a route

1. [Plan a route in advance](#).

Tip: If you cannot see your planned route on the map view, select the back button to show your route.

2. Select the route.
3. Select the pop-up menu button to open the menu.

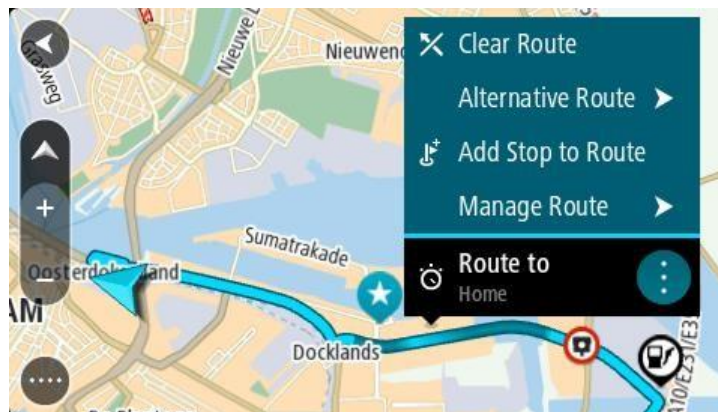


4. Select **Manage Route**.
5. Select **Add to My Routes**.
The name of the route is shown in the edit screen.
6. Edit the name of the route so that you can easily recognise it.
7. Select **Add** to save your route in the My Routes list.

Tip: You can also save a route using the **Add to My Routes** button in the Current Route menu.

Navigating using a saved route

To navigate using a previously saved route, do the following:

1. In the Main Menu, select **My Routes**.
2. Select a route from your list.
The route is shown on the map view.

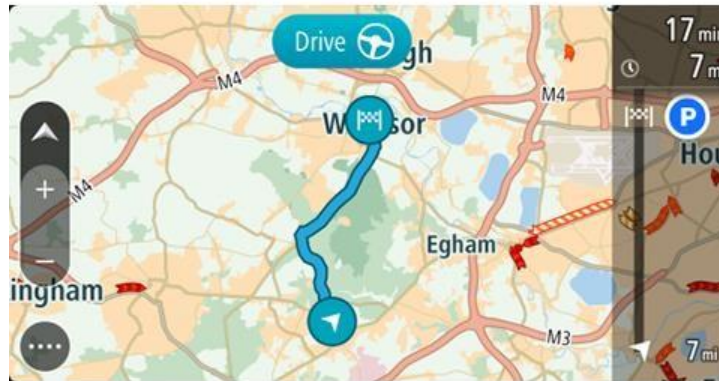

3. To navigate to the start of the saved route, select **Drive/Ride** depending on which device you are using.

The starting point of the saved route is converted to your first stop and then the route is planned. Guidance to your destination begins from your current location. As soon as you start driving, the guidance view is shown automatically.



Tip: There are two other ways to navigate using a saved route:

Select the starting point of the route. When the pop-up menu opens, select **Change to a Stop**. Alternatively, select **Drive to Route** or **Ride to Route** in the Current Route menu.

Navigating to a stop on a saved route


You can navigate from your current location to a stop on your saved route instead of to the start of the saved route. The stop is changed to the start of your route. Your new starting point might be one closer to your current location, or you might just want to make your route shorter.

Note: The route from the original starting point up to the new starting point is removed from the route.

Note: Your original route in My Routes is not changed. If you want to see the whole route, select the route again in My Routes.

1. In the Main Menu, select **My Routes**.
2. Select a route from your list.


The route is shown on the map view.

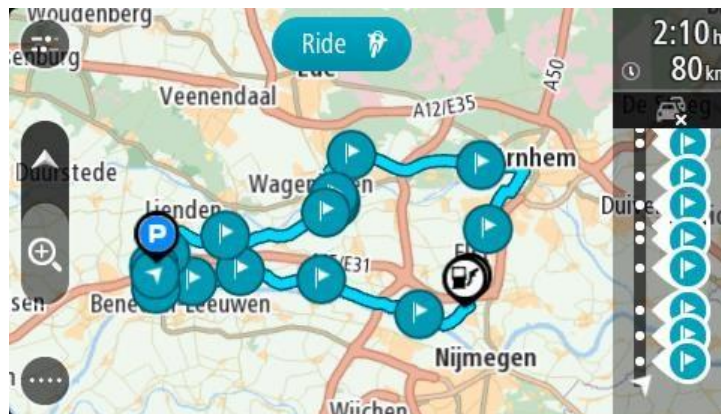

3. Select the stop that you want to use as your starting point, then select the pop-up menu button to open the menu.




4. Select **Start Route From Here**.
Your route is calculated from the new starting point.

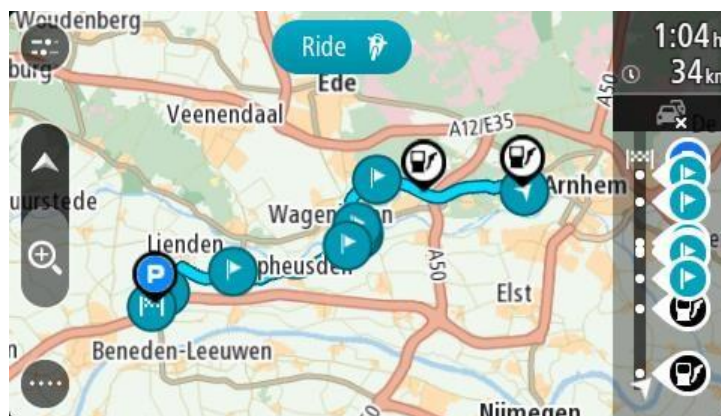

5. Select **Drive/Ride**.

The starting point of your route is converted to your first stop and then the route is planned from your current location. Guidance to your destination begins. As soon as you start driving, the guidance view is shown automatically.

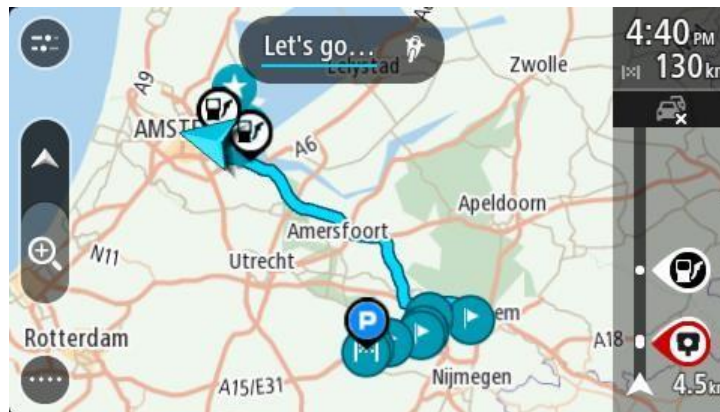


Tip: There are two other ways to navigate using a saved route: Select the starting point of the route. When the pop-up menu opens, select **Change to a Stop**. Alternatively, select **Drive to Route** or **Ride to Route** in the Current Route menu.

Adding a stop to a saved route using the map

Note: You can also press and hold a location on the map and select **Add to Current Route** from the pop-up menu.

1. Press the [switch view button](#) to show the map.
Your complete route is shown on the map.
2. Select the route.
3. Select the pop-menu button to open the menu.

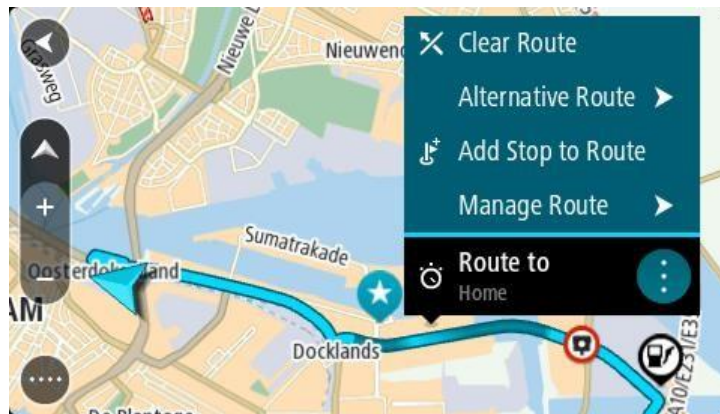

4. Select **Manage Stops**.
5. Select **Add Stop to Route**.
6. Select your new stop on the map.

Tip: If you know the name of your new stop, you can use **Search** to select your stop instead of using the map.

7. Select the **Add Stop** button to add this location as a stop.
Your route is recalculated to include your stop.

Tip: To update the saved route in your My Routes list with the changes, select the route on the map then select **Save Changes to Route** in the pop-up menu.

Deleting a route or a track from My Routes

1. In the Main Menu, select **My Routes**.
2. Select **Edit List**.
3. Select the routes you want to delete.
4. Select **Delete**.

Recording a track

You can record a track while you drive, with or without a route planned. After recording, you can then export your track so that you can share it with others or view it using tools such as Tyre Pro.

To record a track, do the following:

1. In the Main Menu, select **Start Recording**.
A red dot appears in the lower right-hand corner of the screen and initially flashes 3 times to show that you are now recording. The dot remains on the screen until you stop recording.
2. To stop recording, select **Stop Recording** in the Main Menu.
3. Enter a name for your track or you can leave it at the suggested date-time combination.
4. Select **Add** or **Finished**, depending on the device you are using.
5. Your track is saved in My Routes.

Note: You can [export tracks](#) as GPX files and save them on a memory card for sharing with others.

Exporting tracks from the TomTom Navigation app

You can export tracks as GPX files and save them on the Bridge. Using a file explorer app or your computer, you can then share the files with others.

Important: Not every TomTom Bridge has a file explorer app.

Note: Currently, you can export only tracks from your Bridge.

To export one or more tracks, do the following:

1. In the Main Menu, select **My Routes**.
2. Select **Share Tracks**.

Tip: Alternatively, when in map view, select a track and select **Share Track** from the pop-up menu.

3. Select one or more tracks from your list for export.

Tip: To select or deselect all tracks for export, select the pop-up menu button.

4. Select **Share**.

You see the messages **Exporting routes** then **Routes saved successfully**.

Open the file explorer app or [connect your device to a computer](#). You can find the track files in the Bridge internal storage in the **Routes** folder.

Tip: You can share the track files using Bluetooth, a computer, or a memory card.

Importing routes and tracks

Important: You can only transfer route and track files if a file explorer app is installed on your TomTom Bridge.

You can import the following file types:

- GPX files - these become tracks after import.
- ITN files - these become routes after import.

Tip: ITN files are TomTom itinerary files.

You can find GPX and ITN files on the Internet then transfer these files to [My Places](#) by [transferring the files to your device](#).

To import a route or track, do the following:

1. Using a file explorer app, select the file you want to import.
2. Use the file explorer app's send or share function to select the TomTom Navigation app.
3. The TomTom Navigation app imports the route or track.
4. When the route or track is successfully imported, select **OK**.
You can find you route or track in [My Routes](#).

Speed Cameras

About speed cameras

The Speed Cameras service warns you about the following camera locations:

- Fixed speed camera locations.
- Mobile speed camera locations.
- Mobile speed camera hotspots.
- Average speed camera locations.
- Speed enforcement zones.
- Red light camera locations.
- Traffic restriction cameras.

The Speed Cameras service also warns you about the following safety hazards:

- Accident blackspot locations.
- Traffic jams.

The TomTom Bridge uses either a permanent connection or a smartphone connection to [connect to TomTom services](#).

Important: If you are outside of the area covered by your mobile data plan, you may be liable for extra roaming charges while using TomTom Services.

Note: TomTom services are not available in all countries or regions, and not all services are available in all countries or regions. For more information on available services in each region, go to tomtom.com/services.



Speed camera warnings
















Speed camera warning sounds are played for the most common types of speed camera.

Warnings are given as you approach a speed camera. You are warned in several ways:

- A symbol is shown in the route bar and on your route on the map.
- Your distance to the speed camera is shown in the [route bar](#).
- You hear a warning sound as you get near the camera.
- While you are approaching a camera or driving in an average speed check area, your speed is monitored. If you drive more than 5 km/h or 3 mph over the speed limit the route bar turns red. If you drive less than 5 km/h or 3 mph over the speed limit the route bar turns orange.

Tip: In the [map view](#) or [guidance view](#), you can select a speed camera symbol in the route bar to see the type of camera, the maximum speed and also the length of an average speed check area. In the map view, you can also select a speed camera that is shown on your route.

Symbol shown on map	Symbol shown in route bar	Description
		Fixed speed camera - this type of camera checks the speed of passing vehicles and is fixed in one place.

Symbol shown on map	Symbol shown in route bar	Description
		Mobile speed camera - this type of camera checks the speed of passing vehicles and can be moved to different locations.
		Mobile speed camera hotspots - this type of warning shows places where mobile cameras are often used.
		Average speed cameras - these types of cameras measure your average speed between two points. You are warned at the start and end of the average speed check area. While you are driving in an average speed check area, your average speed is shown, instead of your current speed. The distance to the end of the area is shown in the route bar.
		Speed enforcement zones - these zones can contain multiple speed cameras. You are warned at the start and end of a speed enforcement zone. While you are driving in a speed enforcement zone, your current speed is shown, and a visual warning is shown in the route bar.
	 	Red light camera - this type of camera checks for vehicles breaking traffic rules at traffic lights. There are two types of traffic light camera - those which check if you drive through a red light and those which check for driving through a red light together with speeding.
		Traffic restriction - this type of warning warns you about restricted roads.
		Accident blackspot - this type of warning is given for a place where road traffic accidents have historically been concentrated. You are warned at the start and end of the accident blackspot. While you are driving in an accident blackspot, your current speed is shown and a visual warning is shown in the route bar.

Changing the way you are warned

To change the way you are warned about speed cameras, select the **Sounds and Warnings** button in the Settings menu.



You can then set how you want to be warned for the different types of cameras and safety hazards. You can change settings for whether you want to be warned, never warned or warned only if you are speeding.

For example, to change how you are warned when you approach a fixed speed camera, do the following:

1. Select **Sounds & Warnings** in the **Settings** Menu.
2. Select **Cameras**.
3. Select **Fixed cameras**.
4. Select one of the following warning options:
 - **Always**.
 - **Only when speeding**.
 - **Never**.
5. Select the back button.

Tip: To turn off all audible warnings, select **Settings**, followed by **Sounds & Warnings** and then switch off **Speed camera warnings**.

Reporting a new speed camera

If you pass a new speed camera that you were not warned about, you can report it instantly.

Note: To report a speed camera, your device must have a mobile data connection.

You can report a speed camera in two ways:

Using the quick menu to report a speed camera

1. Select the current location symbol or the speed panel in the guidance view.
2. Select **Report Speed Camera** from the pop-up menu.
You see a message thanking you for adding the camera.

Tip: If you make a mistake when reporting a camera, select **Cancel** in the message.

The speed camera is saved on your device automatically and also sent to other users.

Using the Main Menu to report a speed camera

1. Select the Main Menu button to open the Main Menu.



2. Select **Report Speed Camera**.



You see a message thanking you for adding the camera.

Tip: If you make a mistake when reporting a camera, select **Cancel** in the message.

The speed camera is saved on your device automatically and also sent to other users.

Confirm or remove a mobile speed camera

You can confirm the presence of a mobile speed camera or remove a mobile speed camera if it is no longer present.

Just after you pass a mobile speed camera, in the route bar you are asked if the camera was still there.

- Select **Yes** if the mobile speed camera is still there.
- Select **No** if the mobile speed camera has been removed.

Your selection is sent to TomTom. We collect reports from many users to determine if the camera warning should be kept or removed.

Updating locations for cameras and hazards

The locations of speed cameras can change frequently. New cameras can also appear without warning and the locations for other hazards, such as accident blackspots, may also change.

When [connected to TomTom services](#), all camera updates for fixed and mobile camera locations are received in real time. You do not need to do anything to receive updates - they are sent to your navigation app automatically.

Danger Zones

About danger zones and risk zones

The Danger Zones service warns you about danger zones and risk zones on your route when you are in France.

Since 3rd January 2012, it has been illegal to receive warnings about the position of fixed or mobile speed cameras when you are driving in France. To be compliant with this change in French law, speed camera locations are no longer reported but instead areas of danger are indicated as danger zones and risk zones.

Important: Outside of France, you receive warnings about speed cameras. Inside France, you receive warnings about danger zones and risk zones. When you cross the border, the type of warning you receive changes.

A danger zone is a zone specified by French law. A risk zone is a temporary danger zone reported by users. The Danger Zones service warns you about both danger zones and risk zones in the same way.

Danger zones and risk zones may or may not contain one or more speed cameras or a range of other driving hazards:

- Specific locations are not available and a danger zone icon is shown instead as you approach the zone.
- The minimum length of the zone depends on the road type and is 300 m for roads in built-up areas, 2000 m (2 km) for secondary roads and 4000 m (4 km) for motorways.
- The location of one or more speed cameras, if any, can be at any point within the zone.
- If two danger zones are close to each other, the warnings can be merged into a single longer zone.

Information about the location of zones is continually updated by TomTom and other users and frequently sent to the navigation app so that you always have the latest information. You can also contribute by reporting new risk zone locations.

The TomTom Bridge uses either a permanent connection or a smartphone connection to [connect to TomTom services](#).

Important: If you are outside of the area covered by your mobile data plan, you may be liable for extra roaming charges while using TomTom Services.





Note: You cannot remove a danger zone or a risk zone.

Danger zone and risk zone warnings

Warnings are given 10 seconds before you reach a danger zone or risk zone. You are warned in several ways:

- A symbol is shown in the route bar and on your route on the map.
- Your distance to the start of the zone is shown in the [route bar](#).
- You hear a warning sound as you get near the start of the zone.
- While you are approaching a zone or driving in a zone, your speed is monitored. If you drive more than 5 km/h or 3 mph over the speed limit the route bar turns red. If you drive less than 5 km/h or 3 mph over the speed limit the route bar turns orange.
- While you are driving in a zone your distance to the end of the zone is shown in the route bar.

Warning sounds are played for these types of zones:

Symbol shown on map	Symbol shown in route bar	Description
		Danger zone - this type of warning is only given in France. You are warned at the start and end of the danger zone.
		Risk zone - this type of warning is only given in France. You are warned at the start and end of the risk zone.

You can [change the way you are warned](#) about danger and risk zones.

Changing the way you are warned

To change the way you are warned about danger zones, select the **Sounds and Warnings** button in the [Settings](#) menu.



You can change settings for whether you want to be warned or not.

For example, to change how you are warned when you approach a danger zone, do the following:

1. Select **Sounds & Warnings** in the **Settings** Menu.
2. Select **Hazards**.
3. Select **Danger zones**.
4. Select one of the following warning options:
 - **Always**.
 - **Only when speeding**.
 - **Never**.
5. Select the back button.

Tip: To turn off all audible warnings, select **Settings**, followed by **Sounds & Warnings** and then switch off **Warning sounds**.

Reporting a risk zone

If you pass a new temporary risk zone that you were not warned about, you can report it instantly.

Note: To report a risk zone, your device must have a mobile data connection.

If a new temporary risk zone is reported directly before or after an existing risk or danger zone, then the new zone is added to the existing zone.

If enough Danger Zones users report a new risk zone, that zone may become a danger zone and be available for all subscribers.

You can report a risk zone in two ways:

Using the quick menu to report a risk zone

1. Select the current location symbol or the speed panel in the guidance view.
2. Select **Report Risk Zone** from the pop-up menu.

You see a message thanking you for adding the risk zone.

Tip: If you make a mistake when reporting a risk zone, select **Cancel** in the message.

The risk zone is saved on your device automatically and also sent to other users. A reported risk zone stays on your device for three hours.

Using the Main Menu to report a risk zone

1. Select the Main Menu button to open the Main Menu.



2. Select **Report Risk Zone**.



You see a message thanking you for adding the risk zone.

Tip: If you make a mistake when reporting a risk zone, select **Cancel** in the message.

The risk zone is saved on your device automatically and also sent to other users. A reported risk zone stays on your device for three hours.

Updating locations for danger zones and risk zones

The locations of danger zones and risk zones can change frequently. New zones can also appear without warning.

When [connected to TomTom services](#), all zone updates are received in real time. You do not need to do anything to receive updates - they are sent to your navigation app automatically.

My Places

About My Places

My Places provides an easy way to select a location without the need to search for the location each time. You can use My Places to create a collection of useful or favourite addresses.

Tip: The terms "favourite" and "place" mean the same thing - favourites are places that you go to often.

The following items are always in My Places:

- **Home** - Your home location can be your home address or somewhere you often visit. This feature provides an easy way to navigate there.
- **Work** - Your work location can be your workplace address or somewhere you visit often. This feature provides an easy way to navigate there.
- **Recent destinations** - Select this button to select your destination from a list of locations you have recently used as destinations. These also include your stops.
- **Marked locations** - You can mark a location and temporarily add it to My Places.

You can add a location to My Places directly in [My Places](#), by [selecting a location](#) from the map, by [searching for a location](#) or by [marking a location](#).

Your home location, work location, marked locations and the locations that you have added appear in a list in My Places and are shown with a marker on the [map](#).



Setting your home and work locations

You can set your home and work locations in the following ways:

Setting your home or work location using My Places

1. In the Main Menu, select **My Places**.
2. Select **Add Home** or **Add Work**.
3. To select a location for home or work, do one of the following:
 - Zoom in on the map at the location you want to select. Press and hold to select the location, then select the home or work location symbol.



- Select the Search button and search for a location. Select a location to set as home or work. Select **Set home location** or **Set work location**.

Setting your home or work location using the map

1. In the [Map View](#), move the map and zoom in until you can see your home or work location.
2. Select the location by pressing and holding the screen for about one second.

A pop-up menu shows the nearest address.

1. Open the pop-up menu and select **Add to My Places**.
2. In the name bar, enter the name "Home" or "Work".

Note: "Home" must have a capital letter H and "Work" must have a capital letter W.

3. Select **Add**.
Your home or work location is shown on the map.


Changing your home location

You can change your home location in the following ways.

Changing your home location using My Places

1. In the Main Menu, select **My Places**.
2. Select **Home**.

Your home location is shown on the map, with a pop-up menu.

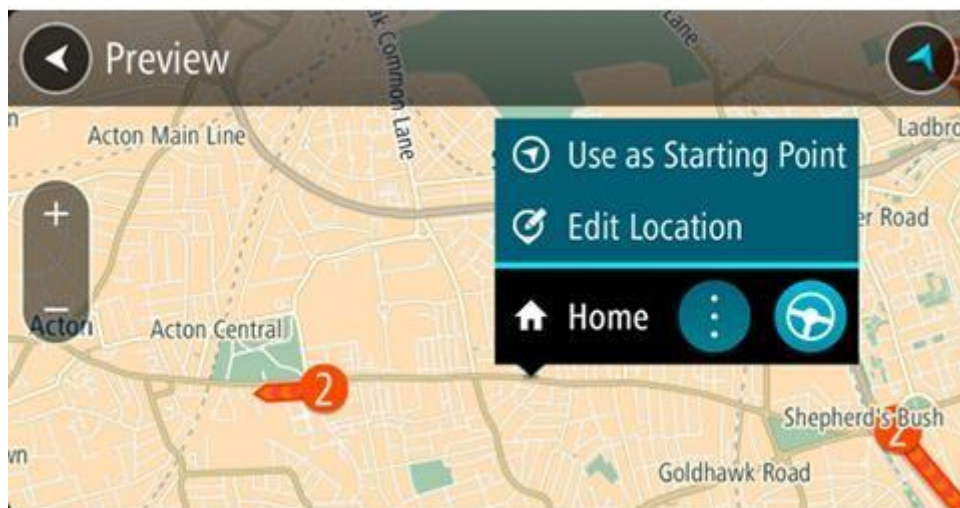

3. Select **Edit Location**.
4. To select a new home location, do one of the following:
 - Zoom in on the map at the location you want to select. Press and hold to select the location, then select the home location symbol.
 - Select the **Search** button and search for a location. Select a location to set as home. Select **Set home location**.

Changing your home location using the map

1. In the [Map View](#), move the map and zoom in until you can see your new home location.
2. Select the location by pressing and holding the screen for about one second.

A pop-up menu shows the nearest address.

1. Open the pop-up menu and select **Add to My Places**.
2. In the name bar, enter the name "Home".

Note: "Home" must have a capital letter H.

3. Select **Add**.
Your home location is changed to the new location.

Adding a location from My Places

1. In the Main Menu, select **My Places**.
2. Select **Add a new place**.
3. To select a location, do one of the following:
 - Zoom in on the map at the location you want to select. Press and hold to select the location, then select the add location symbol.
 - Search for a location. Select **Show on Map**, then select the add location symbol.



The name of the location appears in the edit screen.

4. Edit the name of the location so you can easily recognise it.
5. Select **Done** to save your location in the My Places list.

Add a location to My Places from the map

1. Move the map and zoom in until you can see the destination that you want to navigate to.
2. Press and hold to select the location.



3. Select the pop-up menu button.



4. Select **Add to My Places**.
The name of the location is shown in the edit screen.
5. Edit the name of the location so you can easily recognise it.
6. Select **Done** to save your location in the My Places list.
The location you added is shown with a marker on the map.

Adding a location to My Places using search

1. In the Main Menu, select **Search**.
2. Search for a location.
3. Select the location then select **Show on map**.

4. When the map view shows the location, select the pop-up menu button.



5. Select **Add to My Places**.

The name of the location appears in the edit screen.

6. Edit the name of the location so you can easily recognise it.
7. Select **Done** to save your location in the My Places list.

Adding a location to My Places by marking

To mark a location and temporarily add it to My Places, do the following:

1. Make sure that your current location is the location you want to mark.
2. Select the current location symbol or the speed panel in the [guidance view](#) to open the [quick menu](#).
3. Select **Mark Location**.
4. Once marked, the location is saved in My Places in the Marked Locations list.

If you want to permanently save a marked location, add it My Places by doing the following:

1. In the Main Menu, select **My Places**.
2. Select **Marked Locations** and choose your location from the list.
Your location is shown on the map.
3. Select **Add to My Places** from the pop-up menu.
The name of the location appears in the edit screen.
4. Edit the name of the location so you can easily recognise it.
5. Select **Add**.

Deleting a recent destination from My Places

1. In the Main Menu, select **My Places**.
2. Select **Recent Destinations**.
3. Select **Edit List**.
4. Select the destinations you want to delete.
5. Select **Delete**.

Deleting a location from My Places

1. In the Main Menu, select **My Places**.
2. Select **Edit List**.
3. Select the locations you want to delete.
4. Select **Delete**.

Importing a POI list

You can find collections of POIs on the Internet and upload these POI collections to [My Places](#) by [transferring the files to your device](#). A POI collection might contain, for example, campsites or restaurants for the area you are travelling in, and provides an easy way to select a location without the need to search for the location each time.

Your TomTom Bridge uses .OV2 files for POI collections.

To import an .OV2 file to your TomTom Bridge, do the following steps:

1. Connect the TomTom Bridge to your computer using the USB cable supplied with your device, then switch your device on.

Note: Use ONLY the USB cable supplied with your device. Other USB cables may not work.

Note: You cannot use the mount to connect your device to your computer.

Note: You should plug the USB cable directly into a USB port on your computer and not into a USB hub or USB port on a keyboard or monitor.

2. On your computer, open a file manager program.
Your device appears in your computer's files system as TomTom Bridge.
3. Open your device's Internal Storage folder, then open the Locations folder.
4. Copy the .OV2 files from your computer to the Locations folder.
The .OV2 file is imported and you see the message **New place list added**.

Tip: If your .OV2 file also has an associated icon file, you can also copy that file to the Locations folder. The icon file is used for the POI location pins on the map.

5. Select **My Places** in the Main Menu.
Your new POI list is shown in the Places list.
6. Select your new POI list.
Your new POI list opens showing all the POIs in the list. Select the map view to see the POIs on the map.

Settings

My Vehicle

Important: Route planning for a specific vehicle type is available only when a truck map is installed. If a truck map is not installed, a car route is planned instead.

Select **Settings** in the Main Menu, then select **My Vehicle**.



On this screen, you can [set your vehicle type and dimensions](#).

Routes planned by your device avoid restrictions for the vehicle type, and take into account the vehicle's specifications.

- **Vehicle Type**

Select this setting to choose your vehicle type. When you select your vehicle, the following details for your vehicle are shown:

- **Dimensions (Length/Width/Height)**
- **Weights (Gross/Axle)**
- **Max. speed**

For vehicle types Car and Van, the dimensions, weights and maximum speed are set to zero. To change a setting, select it and enter a value that is specific to your vehicle. You can also leave a setting at zero so it will not be used to determine restrictions when a route is planned.

For vehicle types Bus and Truck, pre-set dimensions, weights and maximum speed are shown. To change a setting, select it and enter a value that is specific to your vehicle.

Important: Settings that are set at zero are not used to determine restrictions when a route is planned.

- **HAZMAT**

If your vehicle type is Truck and you are transporting hazardous materials, select this setting to choose the type of hazardous material.

Appearance

Select **Settings** in the Main Menu, then select **Appearance**.



On this screen, you can change these settings:

- **Display**

Select [Display](#) to change the appearance of the display.

- **Route bar**

Select [Route bar](#) to change the information you see in the route bar.

- **Guidance view**

Select [Guidance view](#) to change the information you see in the guidance view.

- **Automatic zoom**

Select [Automatic Zoom](#) to change how you view a junction as you drive.

- **Automatic map view switching**

By default, automatic changing of views is on. This means, for example, that your Bridge shows the map view when an alternative route is being suggested, along with several other sets of circumstances. Also, for example, that your Bridge shows the guidance view when you start driving and you start to accelerate. Select this setting if you want to turn off automatic changing between guidance view and map view.

- **Show previews of motorway exits**

Select this setting to control the full screen preview when you approach motorway exits.

Display

Select **Settings** in the Main Menu, then select **Appearance**.



Select **Theme colour** to change the accent colour used in the menus, buttons and icons on your Bridge.

Select **Switch to night colours when dark** to automatically switch to night colours when it gets dark.

Route Bar

Select **Settings** in the Main Menu, then select **Appearance**.



Select [Arrival information](#) to change the arrival information you see in the route bar.

Select [Route information](#) to change the route information you see on the route bar.

Show current time


Select this setting to show the current time in the guidance view. When switched on, the current time is shown at the bottom of [the route bar](#).

Show wide route bar if possible

The wide route bar is not shown by default. You can select this setting to switch on the wide route bar in the [guidance view](#).

Note: The wide route bar can only be shown if the screen is wide enough.

When the wide route bar is shown, you see more information about your route. For example, you see time and distance to traffic queues and more.

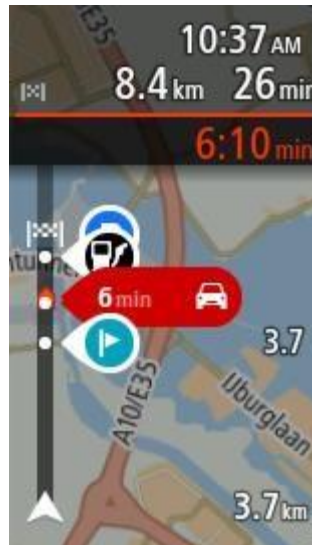

Arrival information

Select **Arrival information** to change the following settings:

- **Show remaining distance**
Select this setting to show the remaining distance left to travel in the arrival information panel during navigation.
- **Show remaining time**
Select this setting to show the remaining time left to travel in the arrival information panel during navigation.
- **Switch between distance and time automatically**
Select this setting to control the automatic switching between remaining distance and remaining time in the arrival information panel.
- **Show arrival information for**
Use this setting to control whether you want to see information about the destination or the next stop in the arrival information panel.

Tip: To find out where the different panels are in the guidance view or map view, see [What's on the screen](#).

Route Information

You can choose to see any of the following in the route bar:

- **Parking**
Select this setting to see car parks and parking.
- **Petrol stations**
Select this setting to see petrol stations on your route.
- **Stops**
Select this setting to see stops on your route.
- **Rest areas**
Select this setting to see rest areas on your route.
- **Toll zones**
Select this setting to see toll zones on your route.
- **Ferries and car shuttle trains**
Select this setting to see ferries and car shuttle trains on your route.

Guidance view

Select **Settings** in the Main Menu, then select **Appearance**.



- **Show current street name**
This setting displays name of the street you driving along on the guidance view.
- **Guidance view style**
Select this setting to choose from 3D or 2D versions of the guidance view. Both the 2D and 3D guidance views move in your direction of travel.

Automatic Zoom

Select **Settings** in the Main Menu, then select **Appearance**.



Select **Automatic zoom** to change settings for the automatic zoom in Guidance view when you approach a turn or a junction. Zooming in can make the turn or junction easier to drive.

- **Zoom in to next turn**
All the turns and junctions on your route are shown zoomed in to the maximum level.
- **Based on road type**
The turns and junctions on your route are shown zoomed in to the standard level for the type of road you are on.
- **None**
None of the turns and junctions on your route are shown zoomed in.

Voices

Select **Settings** in the Main Menu, then select **Voices**.



Choosing a voice

Select **Choose a voice** to change the voice that gives spoken directions and other route instructions.

A wide range of voices are available. There are computer voices which can read street names and other information directly from the map and there are recorded voices which have been recorded by actors.

Note: Computer voices are not available in all languages.

If you need a computer voice and your language is unavailable, then you are asked to choose from a list of installed computer voices available for the country you are in.

Instruction settings

- **Read aloud arrival time**
Use this setting to control whether your arrival time is read aloud.

- **Read aloud early instructions**

For example, if you switch on this setting, you could hear early instructions such as "After 2 km take the exit right" or "Ahead, turn left".

Note: When a recorded voice is chosen, you see only this setting because recorded voices cannot read out road numbers, road signs, etc.

- **Read aloud road numbers**

Use this setting to control whether road numbers are read aloud as part of navigation instructions. For example, when road numbers are read aloud, you hear "Turn left onto A100".

- **Read aloud road sign information**

- Use this setting to control whether road sign information is read aloud as part of navigation instructions. For example, "Turn left onto A302 Bridge Street towards Islington."

- **Read aloud street names**

Use this setting to control whether street names are read aloud as part of navigation instructions. For example, when street names are read aloud, you hear "Turn left Graham Road towards Hackney."

- **Read aloud foreign street names**

Use this setting to control whether foreign street names are read aloud as part of navigation instructions, such as "Turn right Champs Élysées". For example, an English computer voice can read and pronounce French street names but pronunciation may not be completely accurate.

Voice Control

Note: Voice control is only available when your TomTom Bridge is in the dock, the dock has power, and the microphone is connected.

Select **Settings** in the Main Menu, then select **Voice Control**.



- **Start voice control when I say "Hello TomTom"**

Select this setting to start [voice control](#) when you say the wake-up phrase.

- **Change the wake-up phrase**

Use this setting to [make your own wake-up phrase](#).

- **Use voice to accept an alternative route**

Use this setting to control the ability to accept an alternative route by using your voice. When an alternative route can save you time, the number of minutes is also spoken and not just shown on the screen.

Maps

Select **Settings** in the Main Menu, then select **Maps**.



Changing the map

Select a map that you want to use.

Route Planning

Select **Settings** in the Main Menu, then select **Route Planning**.



When a faster route is available

If a faster route found while you are driving, TomTom Traffic can replan your journey to use the faster route. Select from the following options:

- **Always take the fastest route**
- **Ask me so I can choose**
- **Don't ask me**

Always plan this type of route

The types of route you can choose from are as follows:

- **Fastest route** - the route which takes the least time.
- **Shortest route** - the shortest distance between the locations you set. This may not be the quickest route, especially if the shortest route is through a town or city.
- **Most eco-friendly route** - the most fuel-efficient route for your journey.
- **Avoid motorways** - this type of route avoids all motorways.
- **Walking route** - a route designed for making the journey on foot.
- **Bicycle route** - a route designed for making the journey on a bicycle.

Avoid on every route

You can choose to avoid ferries and car shuttle trains, toll roads, carpool lanes, and unpaved roads. Set how your Bridge should manage each of these road features when the device calculates a route.

Carpool lanes are sometimes known as High Occupancy Vehicle Lanes (HOV) and are not present in every country. To travel on these lanes, you may need to have more than one person in the car, for example, or the car may need to use environmentally-friendly fuel.

Sounds and Warnings

Select **Settings** in the Main Menu, then select **Sounds & Warnings**.



On this screen, you can change sound and warning settings.

Tip: Warning sounds are disabled by default. Warning sounds can be enabled by selecting Settings, followed by Sounds & Warnings, followed by Warning Type and switch on Warning Sounds.

Warning type

Warning type

You can choose the type of warnings you want to hear when you are driving:

- **Read aloud**
Hear spoken warnings and warnings sounds.

- **Sounds**
Hear only warning sounds.
- **None**
No warning sounds are given.

Speed camera warnings

Select **Settings** in the Main Menu, then select **Sounds & Warnings**.



Switch on **Speed camera warnings** to see and hear speed camera warnings as you drive.

Cameras

Select **Settings** in the Main Menu, then select **Sounds & Warnings**.



Select **Cameras** to set how you want to be warned for the different types of cameras. You can set whether you want to be warned, never warned or warned only if you are speeding.

Tip: When **Speed camera warnings** in Settings > Sounds & Warnings switched off then this option is not visible.

Hazards

Select **Settings** in the Main Menu, then select **Sounds & Warnings**.



Select **Safety warnings**. You can then set how you want to be warned for the different types of danger zones and safety hazards. You can set whether you want to be warned, never warned or warned only if you are speeding.

- **Danger zones**
This type of warning is only given in France where you are only warned about [danger zones](#).
- **Accident blackspots**
This type of warning is given for a place where road traffic accidents have historically been concentrated.
- **Risk zones**
This type of warning is only given in France where you are only warned about [danger zones](#).
- **Traffic jams**
Traffic jam warnings in the route bar are part of [TomTom Traffic](#). You can choose never to be warned or to be warned when approaching a jam too quickly.
- **When speeding**
This warning is given as soon as you exceed the speed limit by more than 5 km/h or 3 mph. When you are speeding, the speed panel also turns red in the guidance view.

Read aloud traffic warnings

Select **Settings** in the Main Menu, then select **Sounds & Warnings**.



Switch on **Read aloud traffic warnings** to hear spoken warnings about traffic on your route.

Units

Select **Settings** in the Main Menu, then select **Units**.



On this screen, you can change the following settings:

- **Distance**
Select this setting to choose the units used on your device for features such as route planning. If you want the units to be set to those used in your current location, select **Automatic**.

Language

The language used on the TomTom Bridge is also used on the apps installed on the device. For example, the language used for buttons and menus in the navigation app is the same as the language you selected in your device settings.

You can change the device language in **Language & input** in the TomTom Bridge Settings app.

If you change the device language, the voice used for spoken directions and other route instructions in the navigation app might not be compatible with the new device language. Go to [Voices](#) in the Settings menu and download a compatible voice.

Important: Some voices are large files that can take a long time to download. To prevent high data charges we advise you to download a voice using a Wi-Fi connection.

Getting Help

Help

Select **Help** from the Main Menu or the Settings menu.



On this screen, you can see the following information:

- **About**
This is an information screen rather than a setting and shows you information about your TomTom Bridge.

Addendum and Copyright

Addendum

Important Safety Notices and Warnings

Global Positioning System (GPS) and Global Navigation Satellite System (GLONASS)

The Global Positioning System (GPS) and Global Navigation Satellite System (GLONASS) systems are satellite-based systems that provide location and timing information around the globe. GPS is operated and controlled by the Government of the United States of America, which is solely responsible for its availability and accuracy. GLONASS is operated and controlled by the Government of Russia, which is solely responsible for its availability and accuracy. Changes in GPS or GLONASS availability and accuracy, or in environmental conditions may impact the operation of this device. TomTom disclaims any liability for the availability and accuracy of GPS or GLONASS.



Safety messages

Use with care

Use of TomTom products while driving still means that you need to drive with due care and attention.

Your device is intended to serve as a driving aid and is not a substitute for driving with due care and attention. Always obey posted road signs and applicable laws. Distracted driving can be extremely dangerous. Please do not operate this device in any manner that diverts a driver's attention from the road in an unsafe manner. TomTom recommends using the hands-free systems where available and pulling over to a complete stop at a safe location in order to interact with the device.

Notice for oversized/commercial vehicles

If a truck map is not installed on this product then this product is intended for use only on cars and light commercial vehicles without a trailer, because the product will not provide appropriate routes for oversized and commercial vehicles, buses, or campers and recreational vehicles. If you are operating one of those vehicle types, please visit tomtom.com to find an appropriate product with maps containing height and weight restrictions.

Aircraft and hospitals

Use of devices with an antenna is prohibited on most aircraft, in many hospitals and in many other locations. This device must not be used in these environments.

Safety messages

Please read and take note of the following important safety advice:

- Check your tyre pressures regularly.
- Service your vehicle regularly.
- Medication can affect your riding or driving ability.
- Always use seat belts if available.
- Don't drink and drive.
- Most accidents happen less than 5 km / 3 miles from home.
- Obey the rules of the road.
- Always use your turn indicators.
- Every 2 hours, take a break for at least 10 minutes.

- Keep your seat belts on.
- Keep a safe distance from the vehicle in front.
- Before setting off on a motorbike, fasten your helmet correctly.
- When riding a motorbike, always wear protective clothing and equipment.
- When riding a motorbike, be extra vigilant and always ride defensively.

Rating: DC5V, 2.0A

How TomTom uses your information

Information regarding the use of personal information can be found at tomtom.com/privacy.

Battery

This product uses a Lithium-Ion battery.

Do not use it in a humid, wet and/or corrosive environment. Do not put, store or leave your product in a high temperature location, in strong direct sunlight, in or near a heat source in a microwave oven or in a pressurised container, and do not expose it to temperatures over 140°F / 60°C. Failure to follow these guidelines may cause the battery to leak acid, become hot, explode or ignite and cause injury and/or damage. Do not pierce, open or disassemble the battery. If the battery leaks and you come into contact with the leaked fluids, rinse thoroughly with water and seek medical attention immediately. For safety reasons, and to prolong the lifetime of the battery, remove your product from your vehicle when you are not driving and keep in a cool, dry place. Charging will not occur at low (below 32°F / 0°C) or high (over 140°F / 60°C) temperatures.


Temperatures: Standard operation: 32°F / 0°C to 140°F / 60°C; short period storage: -4°F / -20°C to 113°F / 45°C; long period storage: -4°F / -20°C to 95°F / 35°C.

Important: Before you switch on the device, let the device acclimatise to the standard operation temperature range for at least 1 hour. Do not use the device outside of this temperature range.

Caution: Risk of explosion if battery is replaced by an incorrect type.

Do not remove or attempt to remove the non-user-replaceable battery. If you have a problem with the battery, please contact TomTom customer support.

THE BATTERY CONTAINED IN THE PRODUCT MUST BE RECYCLED OR DISPOSED OF PROPERLY ACCORDING TO THE LOCAL LAWS AND REGULATIONS AND ALWAYS KEPT SEPARATE FROM HOUSEHOLD WASTE. BY DOING THIS YOU WILL HELP CONSERVE THE ENVIRONMENT. USE YOUR TOMTOM DEVICE ONLY WITH THE SUPPLIED DC POWER LEAD (CAR CHARGER/BATTERY CABLE), AC ADAPTER (HOME CHARGER), IN AN APPROVED CRADLE OR USING THE SUPPLIED USB CABLE TO CONNECT TO A COMPUTER FOR BATTERY CHARGING.

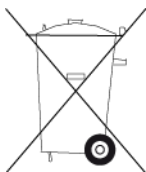

If your device requires a charger, please use this device with the charger provided. For replacement chargers, go to tomtom.com for information about approved chargers for your device.

The stated battery life is a maximum possible battery life. The maximum battery life will only be achieved under specific atmospheric conditions. The estimated maximum battery life is based on an average usage profile.

For tips on extending the battery life, see this FAQ: tomtom.com/batterytips.

CE marking

This equipment complies with the requirements for CE marking when used in a residential, commercial, vehicular or light industrial environment, achieving all the appropriate provisions of the relevant legislation in the EU.

Devices that have a GPRS module are labelled with:

CE0168

Model numbers: 4F170

Devices that do not have a GPRS module are labelled with:

CE

Model numbers: 4F172, 4F173, 4F176

R&TTE directive

Hereby, TomTom declares that TomTom products and accessories are in compliance with the essential requirements and other relevant provisions of the EU Directive 1999/5/EC. The declaration of conformity can be found here: tomtom.com/legal.

WEEE directive

The wheellie bin symbol on the product or its packaging indicates that this product shall not be treated as household waste. In line with EU Directive 2012/19/EU for waste electrical and electronic equipment (WEEE), this electrical product must not be disposed of as unsorted municipal waste. Please dispose of this product by returning it to the point of sale or to your local municipal collection point for recycling. By doing this you will help conserve the environment.



Triman logo



Pacemakers

Pacemaker manufacturers recommend that a minimum of 15cm / 6 inches be maintained between a handheld wireless device and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with independent research and recommendations by Wireless Technology Research.

Guidelines for people with pacemakers

- You should ALWAYS keep the device more than 15cm / 6 inches from your pacemaker.
- You should not carry the device in a breast pocket.

Other medical devices

Please consult your physician or the manufacturer of the medical device, to determine if the operation of your wireless product may interfere with the medical device.

Connected networks

Devices sold in the European Union that contain a GSM module are intended for connection to the following networks:

GSM/GPRS 900/1800

WCDMA 2100/900

EU Specific Absorption Rate (SAR) compliance

THIS WIRELESS DEVICE MODEL MEETS GOVERNMENT REQUIREMENTS FOR EXPOSURE TO RADIO WAVES WHEN USED AS DIRECTED IN THIS SECTION

This GPS Navigation System is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Council of the European Union.

The SAR limit recommended by The Council of the European Union is 2.0W/kg averaged over 10 grams of tissue for the body (4.0 W/kg averaged over 10 grams of tissue for the extremities - hands, wrists, ankles and feet). Tests for SAR are conducted using standard operating positions specified by the EU council with the device transmitting at its highest certified power level in all tested frequency bands.

Exposure limits

This device complies with radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

Certification information for the user

To see the product certification information for your device, do the following:

1. Select **Settings** in the Main Menu.
2. Select **About your TomTom device**.
3. Select **Certificates**.

Regulatory Compliance Mark



This product displays the Regulatory Compliance Mark (RCM) to show that it complies with relevant Australian regulations.

Notice for New Zealand

This product displays R-NZ to show it complies with relevant New Zealand regulations.

Warning for Australia

The user needs to switch off the device when exposed to areas with potentially explosive atmospheres such as petrol stations, chemical storage depots and blasting operations.

Customer support contact (Australia and New Zealand)

Australia: 1300 135 604

New Zealand: 0800 450 973

Customer support contact (Asia)

Malaysia 1800815318

Singapore 8006162269

Thailand 0018006121008

Indonesia 0018030612011

This document

Great care was taken in preparing this document. Constant product development may mean that some information is not entirely up to date. The information in this document is subject to change without notice.

TomTom shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the performance or use of this document. This document contains information protected by copyright. No part of this document may be photocopied or reproduced in any form without prior written consent from TomTom N.V.

Model names

4FI70, 4FI72, 4FI73, 4FI76

Copyright notices

© 1992 - 2017 TomTom. All rights reserved. TomTom and the "two hands" logo are registered trademarks of TomTom N.V. or one of its subsidiaries. Please see tomtom.com/legal for limited warranty and end user licence agreements applying to this product.

© 1992 - 2017 TomTom. All rights reserved. This material is proprietary and the subject of copyright protection and/or database rights protection and/or other intellectual property rights owned by TomTom or its suppliers. The use of this material is subject to the terms of a licence agreement. Any unauthorised copying or disclosure of this material will lead to criminal and civil liabilities.

SoundClear™ acoustic echo cancellation software © Acoustic Technologies Inc.



The software included in this product contains copyrighted software that is licensed under the GPL. A copy of that licence can be viewed in the Licence section. You can obtain the complete corresponding source code from us for a period of three years after our last shipment of this product. For more information, visit tomtom.com/gpl or contact your local TomTom customer support team via tomtom.com/support. Upon request, we will send you a CD with the corresponding source code.